

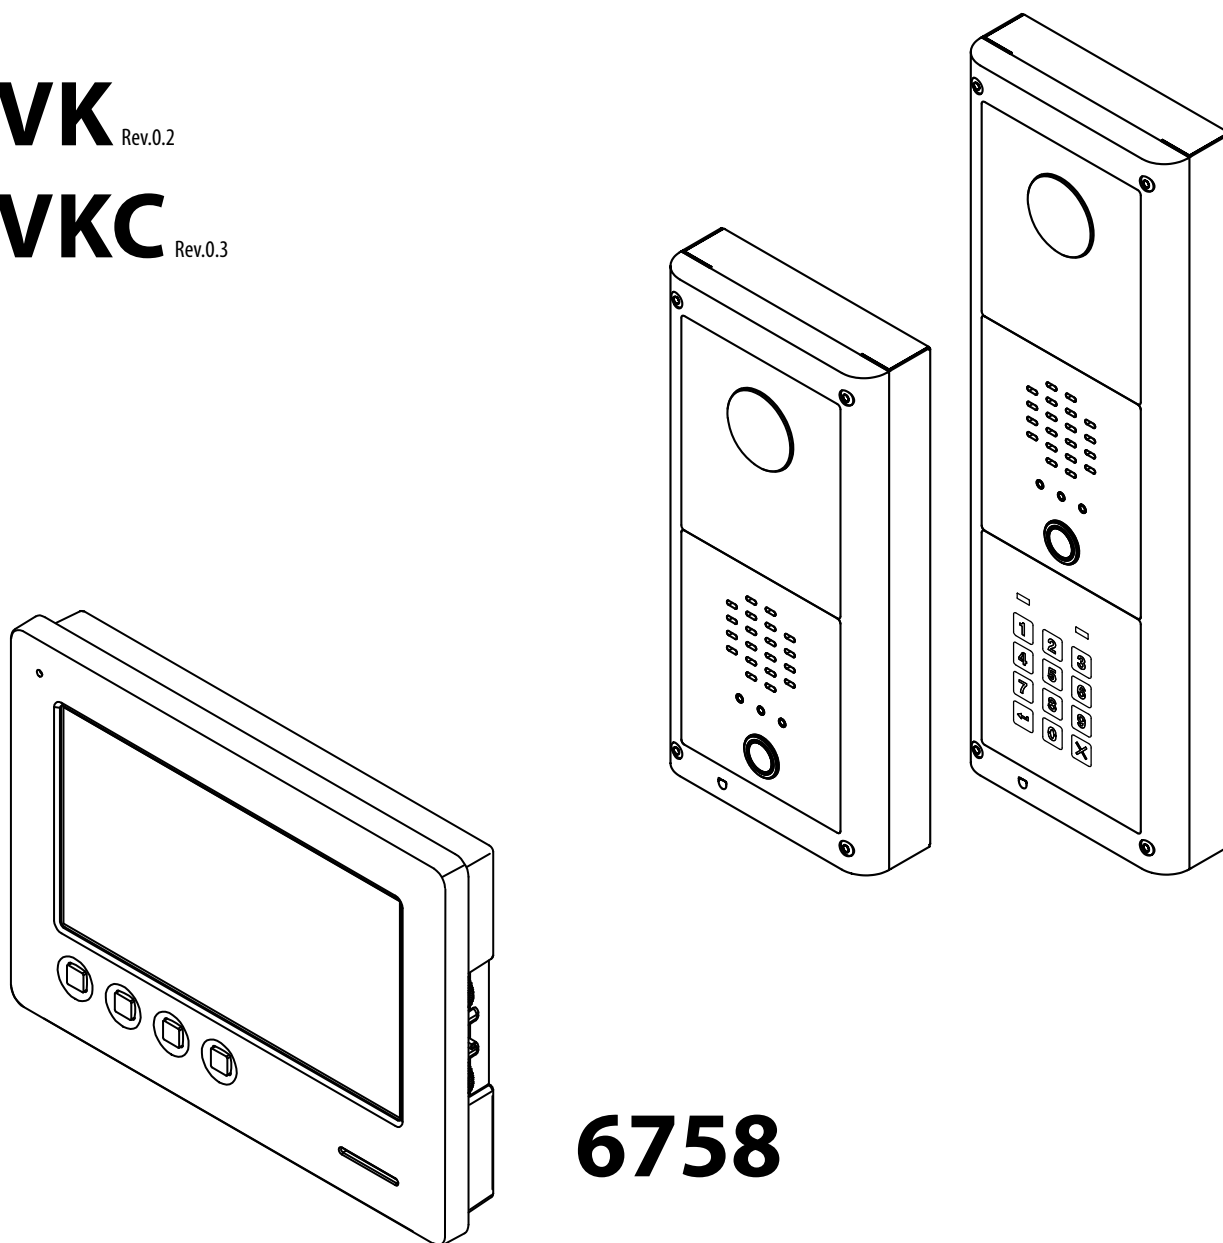
VIDEOKIT

VRVK/6758 SERIES

"6 Wire" bus one way, two way vandal resistant videokit

VRVK Rev.0.2

VRVKC Rev.0.3



Installation handbook



Index

System components and available versions	3
General directions for installation	5
Troubleshooting guide	6
Art. VR4KCM Camera module	7
Art. VR4KAMK Speaker unit.....	9
Art. VR4901 Vandal resistant digital codelock module	12
4000 Series surface and flush mounting door station installation	15
Art. 6758 7" hands free colour display digital videophone	17
6700 Series Videophone wall mounting instructions	20
Art. 316 - Art. 316N 4 Way video distributor for system with balanced video signal	21
Installation diagrams	22

NOTES AND SUGGESTIONS

- All diagrams refer to all kits versions: flush or surface.
- Dashed connections refer to optional connections ("Local bell", "Push to exit" & "Door monitor").
- Some diagrams show how to connect a 12Vdc electric lock: these directions are suitable for all diagrams in this manual.
- Each time a setting is changed on a videophone (address, extension, number of rings etc.), the videophone must be disconnected from the relevant connection board then after a few seconds reconnected again to allow the recognizing of the new setting.

DECLARATION OF RESPONSIBILITY

This manual has been written and revised carefully. The instructions and the descriptions which are included in it are referred to VIDEX parts and are correct at the time of print. However, subsequent VIDEX parts and manuals, can be subject to changes without notice. VIDEX Electronics S.p.A. cannot be held responsible for damages caused directly or indirectly by errors, omissions or discrepancies between the VIDEX parts and the Manual.



WE RECOMMEND

This equipment is installed by a Competent Electrician, Security on Communications Engineer

System components and available versions

VRVK/6758 Colour videokit.

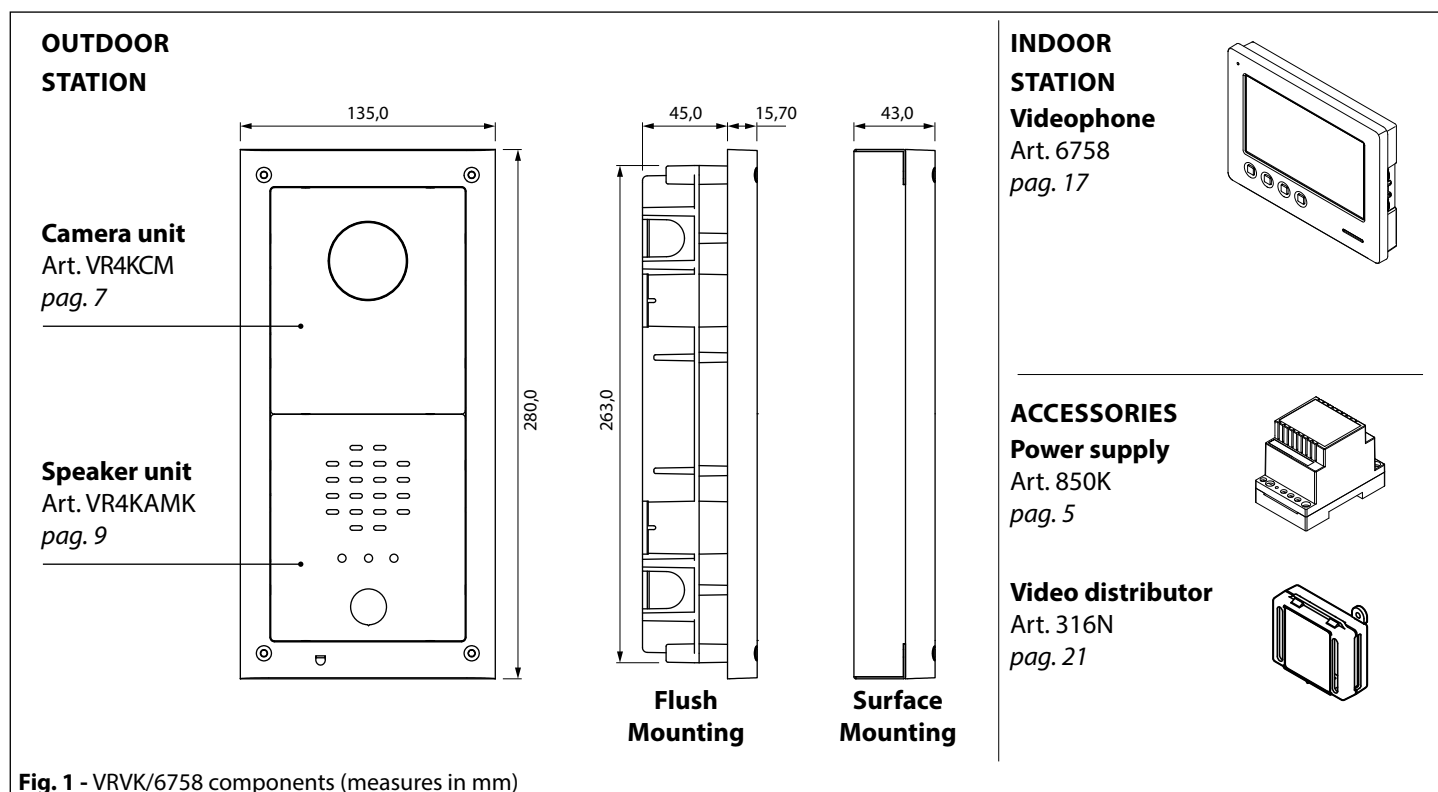










Fig. 1 - VRVK/6758 components (measures in mm)

ONE WAY VERSIONS	VRVK-1/6758 - flush mounting		
	 1 Outdoor station composed of: 1 Art. VR4KCM: Camera unit 1 Art. VR4KAMK-1: 1 button speaker unit 1 Art. 4852: Flush mounting box	 1 Colour videophone Art. 6758	 1 Power supply Art. 850K
TWO WAY VERSIONS	VRVK-1S/6758 - surface mounting		
	 1 Outdoor station composed of: 1 Art. VR4KCM: Camera unit 1 Art. VR4KAMK-1: 1 button speaker unit 1 Art. 4882: Surface mounting box	 1 Colour videophone Art. 6758	 1 Power supply Art. 850K
	VRVK-2/6758 - flush mounting		
	 1 Outdoor station composed of: 1 Art. VR4KCM: Camera unit 1 Art. VR4KAMK-2: 2 button speaker unit 1 Art. 4852: Flush mounting box	 2 Colour videophones Art. 6758	 2 Power supplies Art. 850K  1 Video distributor Art. 316N
VRVK-2S/6758 - surface mounting			
 1 Outdoor station composed of: 1 Art. VR4KCM: Camera unit 1 Art. VR4KAMK-2: 2 button speaker unit 1 Art. 4882: Surface mounting box	 2 Colour videophones Art. 6758	 2 Power supplies Art. 850K  1 Video distributor Art. 316N	

VRVKC/6758 Colour videokit plus a codelock module.

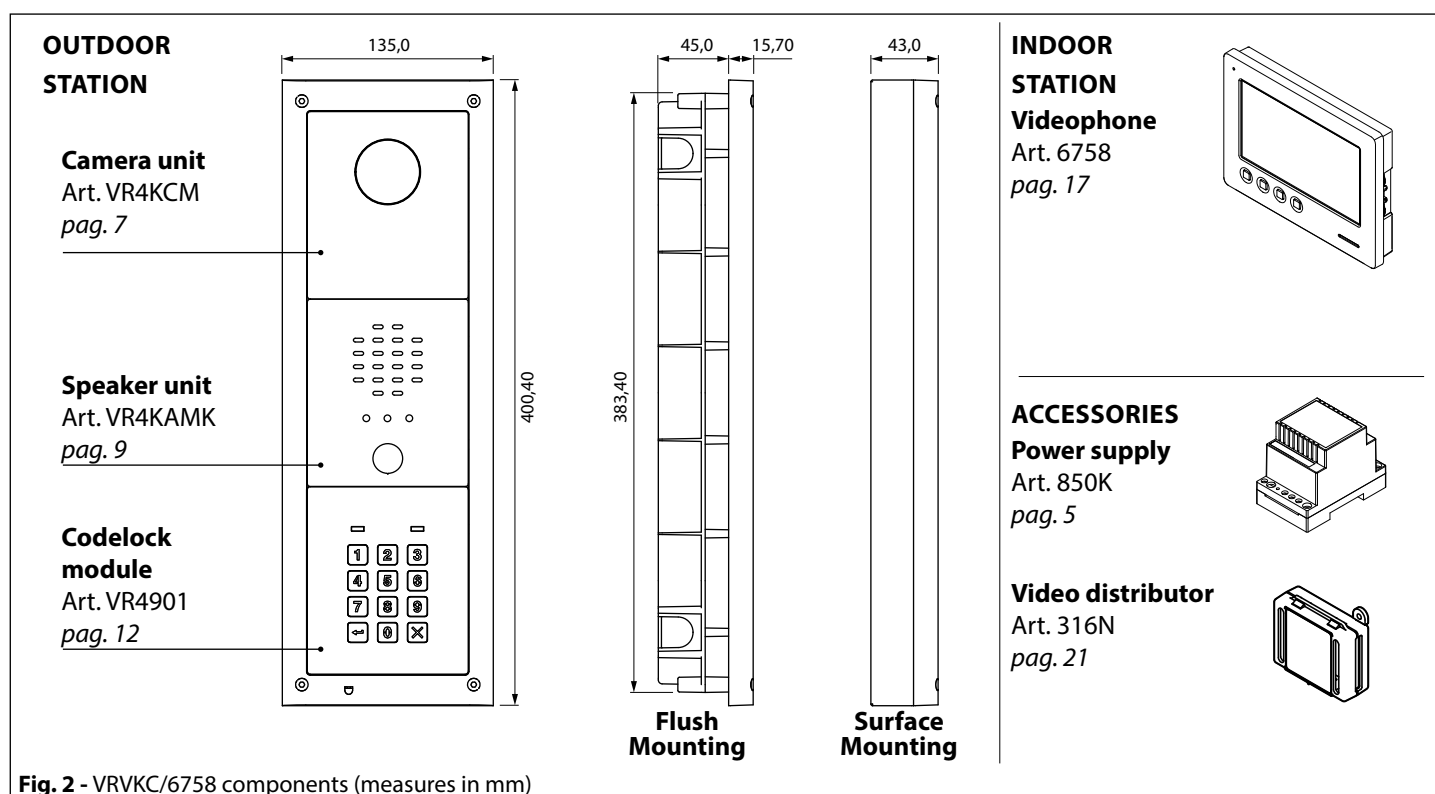










Fig. 2 - VRVKC/6758 components (measures in mm)

ONE WAY VERSIONS	VRVKC-1/6758 - flush mounting			
	 1 Outdoor station composed of: 1 Art. VR4KCM: Camera unit 1 Art. VR4KAMK-1: 1 button speaker unit 1 Art. VR4901: Codelock module 1 Art. 4853: Flush mounting box	 1 Colour videophone Art. 6758	 1 Power supply Art. 850K	
TWO WAY VERSIONS	VRVKC-1S/6758 - surface mounting			
	 1 Outdoor station composed of: 1 Art. VR4KCM: Camera unit 1 Art. VR4KAMK-1: 1 button speaker unit 1 Art. VR4901: Codelock module 1 Art. 4883: Surface mounting box	 1 Colour videophone Art. 6758	 1 Power supply Art. 850K	
	VRVKC-2/6758 - flush mounting			
	 1 Outdoor station composed of: 1 Art. VR4KCM: Camera unit 1 Art. VR4KAMK-2: 2 button speaker unit 1 Art. VR4901: Codelock module 1 Art. 4853: Flush mounting box	 2 Colour videophones Art. 6758	 2 Power supplies Art. 850K	 1 Video distributor Art. 316N
VRVKC-2S/6758 - surface mounting				
 1 Outdoor station composed of: 1 Art. VR4KCM: Camera unit 1 Art. VR4KAMK-2: 2 button speaker unit 1 Art. VR4901: Codelock module 1 Art. 4883: Surface mounting box	 2 Colour videophones Art. 6758	 2 Power supplies Art. 850K	 1 Video distributor Art. 316N	

General directions for installation

CONNECTION TO MAINS

The system must be installed according to national rules in force, in particular we recommend to:

- Connect the system to the mains through an **all-pole circuit breaker** which shall have contact separation of at least 3mm in each pole and shall disconnect all poles simultaneously;
- The **all-pole circuit breaker** shall be placed for easy access and the switch shall remain readily operable.

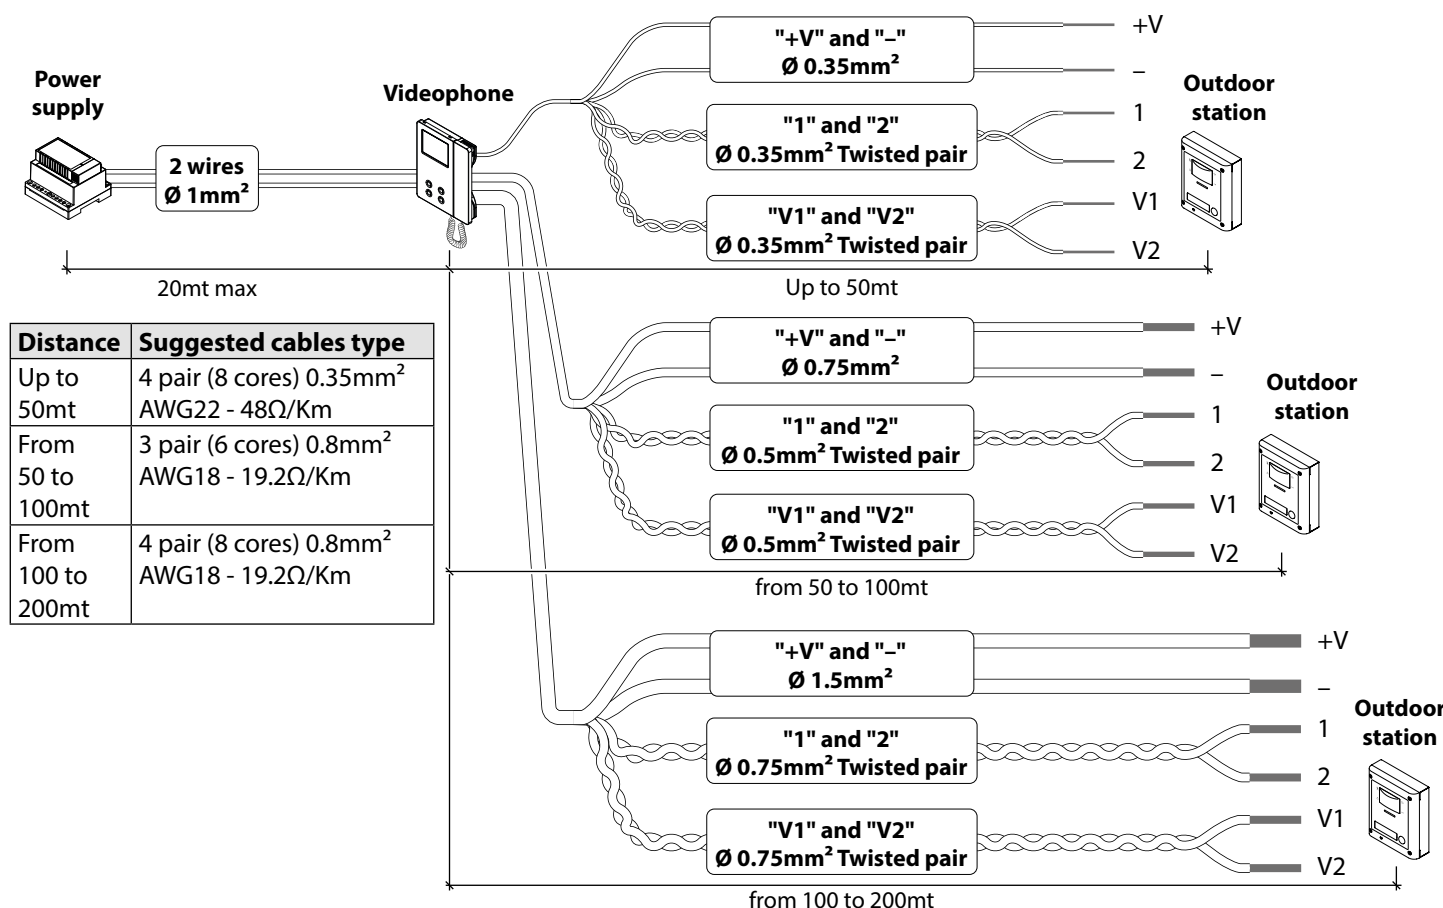
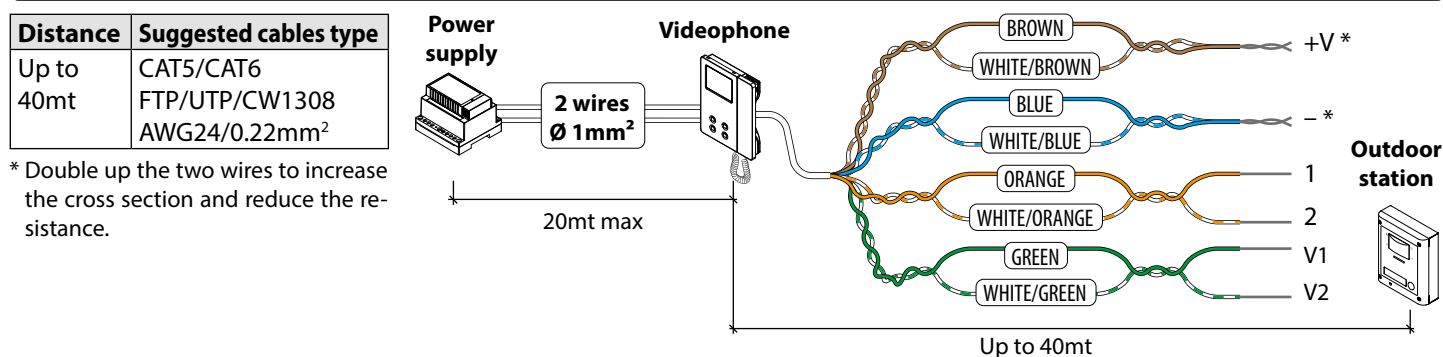
POWER SUPPLY INSTALLATION

- Remove the terminal side covers by unscrewing the retaining screws;
- Fix the power supply to a DIN bar or directly to the wall using two expansion type screws;
- Switch off the mains using the circuit breaker mentioned above and then make the connections as shown on the installation diagrams;
- Check the connections and secure the wires into the terminals;
- Replace the terminal covers and fix them using the relevant screws;
- After completing the wiring, double check all connections then restore the mains.

CABLE SIZE

Video connections and Audio connections must be wired in twisted pair: pair the video lines (terminals/signals "V1" and "V2"), pair the audio lines (terminals /signals "1" and "2").

IMPORTANT NOTE: SOLID COPPER CABLES MUST BE USED. COPPER COATED STEEL (CCS) AND COPPER COATED ALUMINIUM (CCA) CAN NOT BE USED ON THE SYSTEM.



Troubleshooting guide

In case of system failure, try the following preliminary checks:

- Check that the cables are connected as shown in the installation diagram and that the cables are firmly fixed into the relevant terminals;
- Check that the mains voltage is available on terminals 230Vac (or 127Vac) and 0 of the power transformer Art. 850K;
- Check the 24Vac voltage output of the power transformer Art. 850K. If this voltage is not available it could be the 1,6A fuse, in this case remove the mains voltage, remove possible short-circuits or overload sources then replace the fuse with an equal or equivalent one.
- Check that the voltage between the terminals "+" and "-" of the speaker unit is between 16 and 20Vdc.

If the problem persists try the tests in the following table or contact technical support.

SYMPTOM	CAUSE	SOLUTION
The door station is not able to call the extension (the bell LED is switched on for 2 seconds):	• Wrong connection between door station and the videophone • Cable size too small. • Programmed videophone address incorrect. • You have changed the videophone address without power down the system.	• Check the 6 common wire connections especially wire "1" (speech line/data). • Increase cable size or double up using two wires for each connection. • Check videophone address on dip-switches. • Power down the system then power up again to detect the new videophone address.
External call works but when answered the communication fails:	• Cable size too small.	• Increase cable size or double up using two wires for each signal.
During the conversation it is not possible to open the door:	• Cable size too small.	• Increase cable size or double up using two wires for each signal.
During the conversation it is not possible to open the door but the key LED on the door station switches on for the programmed time:	• Incorrect position of J2 jumper. • Electric lock wires unconnected or in short. • Wrong electric lock type.	• Check J2 position on the door station. • Check connection. • Check that the electric lock type (ac or dc) is suitable for the J2 position chosen.
Speech only from outside to inside:	• Wire "2" broken or in short.	• Check connection of wire "2".
Low volume of speech:	• Volume trimmers of door station require adjustment.	• Adjust the trimmers until the required volume is reached.
Noise over the speech line during the conversation:	• The 6 common wires are cabled together with 230 or 380Vac power lines. • The 6 common wires are cabled together with 24Vac videophone power supply wires.	• Separate the 6 common wires from the high voltages cables. • Separate the 6 common wires from the two 24Vac wires or cable them together only for a short distance.
Camera recall service does not work:	• Camera recall button pressed for a number of times different from the ID of the door station to be switched on.	• Check the ID (1..4) of the door station to be recalled and press the camera recall button as many time as the ID value.
Intercommunicating call does not work:	• "Key" button pressed for a number of times different from the videophone address value.	• Check the address of the videophone you are calling and try again.
The video shown on the monitor is of a bad quality and the image is distorted or double	• V1,V2 signals unconnected, reversed or shorted. • The switches of the two way dip-switch are not both in ON position. • V1,V2 of the last Art. 316N (if present) not closed with 75 Ohm resistor.	• Check that the wires are not broken or shorted. • Set both switches to the ON position. • Use 2x 75 Ohm resistors to connect V1 & V2 to 0V.
Local call does not work:	• Wrong connection or call button broken.	• Check connection or replace the button.

Art. VR4KCMC Camera module

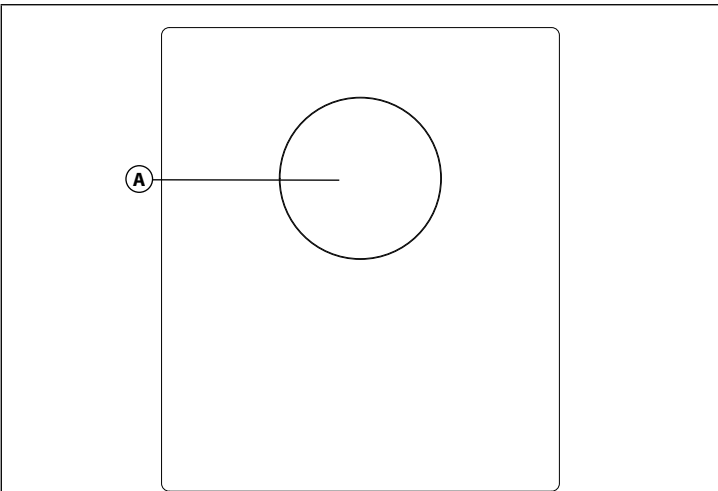


Fig. 1 Front

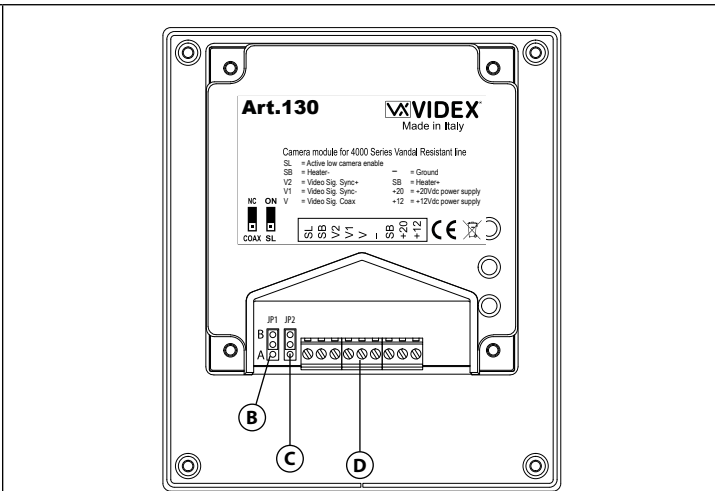


Fig. 2 Back

DESCRIPTION

4000 Series vandal resistant camera module (Brushed 2.5mm 12 gauge stainless steel fascia).

The Art. VR4KCMC includes a colour CMOS high quality wide angle camera. The wide camera has a horizontal viewing angle of 170 degrees. The white light illumination LEDs are mounted around the camera.

The Art. VR4KCMC can be used in video door entry systems: traditional (combined with Art. VR4KAM), VX2200 (combined with Art. VR4KAM2W) or Videokit (combined with Art. VR4KAMK).

The camera can be set for composite video signal (coax cable) or for balanced video (twisted pair cable).

VIDEO SYSTEM SETUP

The video system setup is carried out using the jumpers accessible from the backside of the module.

JP1 - VIDEO SIGNAL MODE

	NC (B position) Balanced video signal (terminals V1 and V2)
	COAX (A position) Coax video signal (terminals V and —)



JP2 - CAMERA SWITCHING ON MODE

	ON (B position) The camera switches on if supplied on either +12 & — or +20 & — power supply inputs
	SL (A position) The camera switches on when a 0V is applied to the SL terminal (a permanent 12 or 20Vdc is required on either +12 & — or +20 & —)

CAMERA NOTES


FIELDS OF VIEW

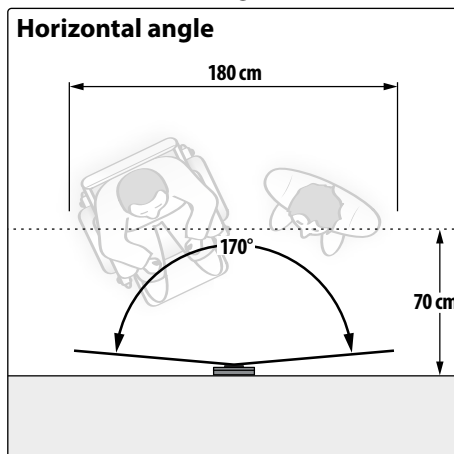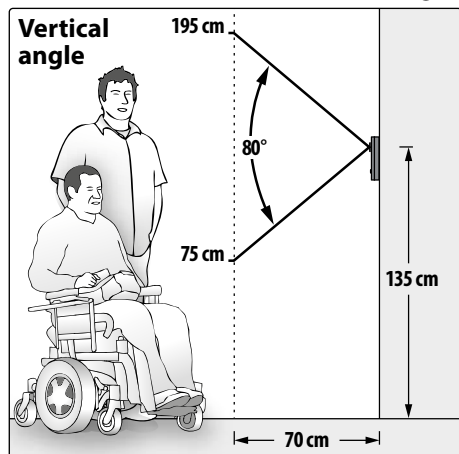The fields of view are 80° for vertical angle and 170° for horizontal angle.



MAXIMUM ILLUMINATION DISTANCE FROM CAMERA AT NIGHT

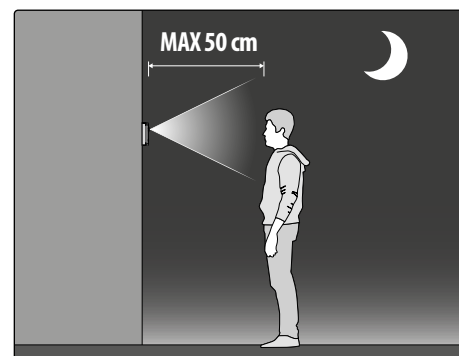The illumination LED's within the camera will illuminate the visitor when they are within 50 cm of the camera.



Art. VR4KCMC Camera module**CONNECTION TERMINALS SIGNALS**

SL	Active low input to enable the camera lightning (the jumper JP2 must be moved in SL position)
SB	Heater ground input
V2	Balanced video signal sync-
V1	Balanced video signal sync+
V	Coax video signal
—	Ground input
SB	Heater plus input 12V
+20	20Vdc power supply input
+12	12Vdc power supply input

TECHNICAL SPECIFICATION**Working voltage:** 12Vdc/24Vdc**Power consumption while operating:** 100mA**Working Temperature:** -10 +50°C**CLEANING OF THE PLATE**

Use a clean and soft cloth. Use moderate warm water or non-aggressive cleansers.

Do not use:

- abrasive liquids;
- chlorine-based liquids;
- metal cleaning products.

Art. VR4KAMK Speaker unit

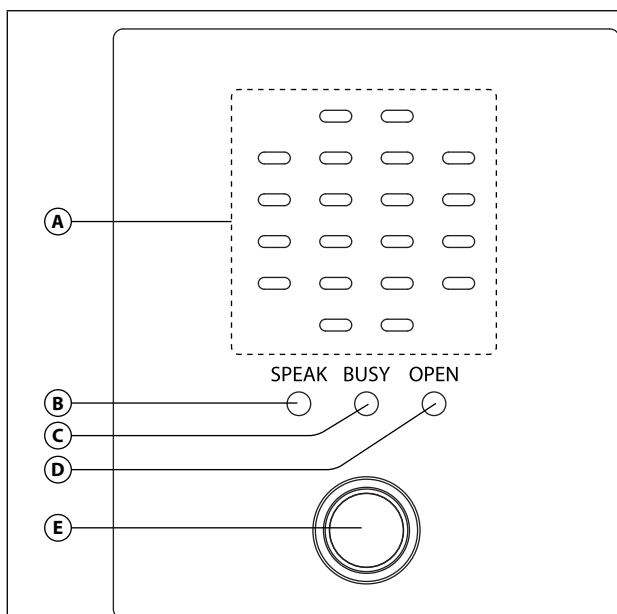


Fig. 1 Front

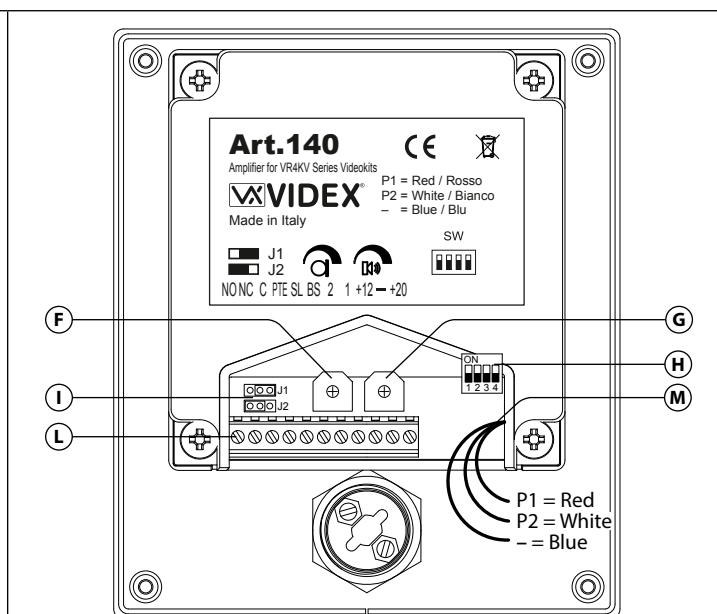


Fig. 2 Back


DESCRIPTION

Vandal resistant speaker unit specific for VRKV series 6 wire bus videokits.


LEGEND

- | | |
|---------------|------------------------|
| Ⓐ Loudspeaker | Ⓕ Microphone volume |
| Ⓑ Yellow LED | Ⓖ Loudspeaker volume |
| Ⓒ Red LED | Ⓗ 4 way dip-switch |
| Ⓓ Green LED | Ⓘ Jumpers |
| Ⓔ Call button | Ⓛ Connection terminals |
| | Ⓜ Button wires |

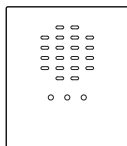
AVAILABLE VERSIONS




Art. VR4KAMK-0

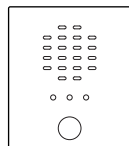


Art. VR4KAMK-1

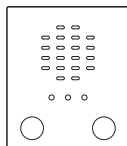

Art. VR4KAMK-2

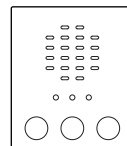

Art. VR4KAMK-3

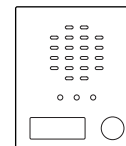

Art. VR4KAMK-1NP

LEDS

Yellow (SPEAK)	Illuminates during the conversation
Red (BUSY)	Illuminates when the speaker unit is operating or when other speaker units in the same system are operating to signal the busy state of the system
Green (OPEN)	Illuminates when the door opens for the duration of the door opening time

CONTROLS

	Microphone volume Adjust the microphone volume. Rotate clockwise to increase or anti-clockwise to decrease
	Loudspeaker volume Adjust the loudspeaker volume. Rotate clockwise to increase or anti-clockwise to decrease

Art. VR4KAMK Speaker unit

SETTINGS (DIP-SWITCH & JUMPERS)
4 WAY DIP-SWITCH

First two switches are used to set the speaker unit address: the speaker unit address is required for camera recall operation on 2 or more entrance systems.

	Switches 1,2		Unit Address
	OFF	OFF	1
	ON	OFF	2
	OFF	ON	3
	ON	ON	4
	Switch 3		Conversation Time
	OFF		60 seconds
	ON		120 seconds
	Switch 4		Door opening time (J2 = "L" position)
	OFF		2 seconds
	ON		6 seconds

JUMPERS J1, J2



	J1 Position	Call tone reassurance volume
	Right Left	High Low
	J2 Position	Door open relay operating mode
	Right Left	Dry contacts Capacitor discharge

HOW TO CONNECT ELECTRIC LOCK

The "door-open" relay can operate either as "dry contact" or "capacitive discharge" mode.

- In "dry contact" operation mode the relay works in a traditional way, a power supply or a power source is needed to operate the lock (12-24Vac/dc 2A max), and activation lasts according to the door opening time programmed.
- In "capacitive discharge" operation mode the relay's contacts, when active, supply directly the lock (12Vac/dc 1A max) for a moment. You don't need a power supply for the lock and the door opening time programmed do not affect the activation time.

A possible deterioration of the mechanical performance of the electric lock, might cause the "capacitive discharge" malfunctioning in time. In case the electric lock is used in very dusty environments or in peculiar climate conditions, we suggest to use the "open door" relay in "dry contacts" mode.

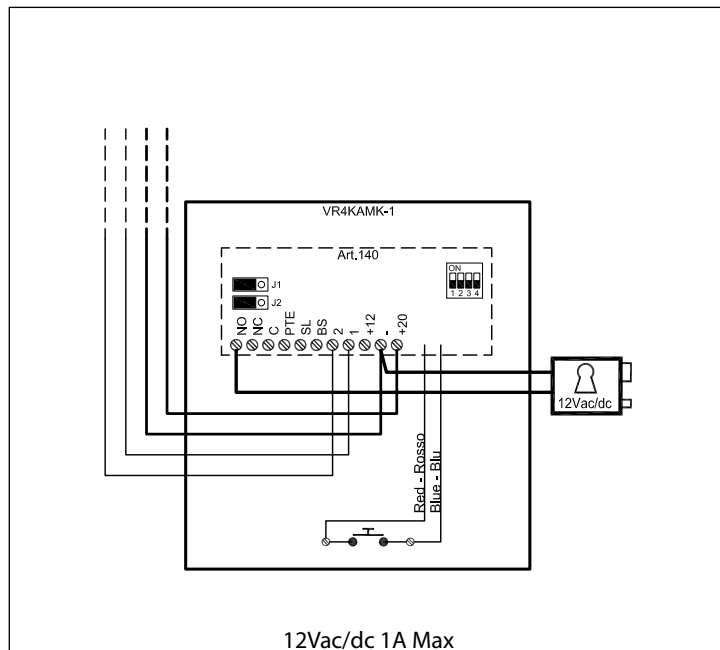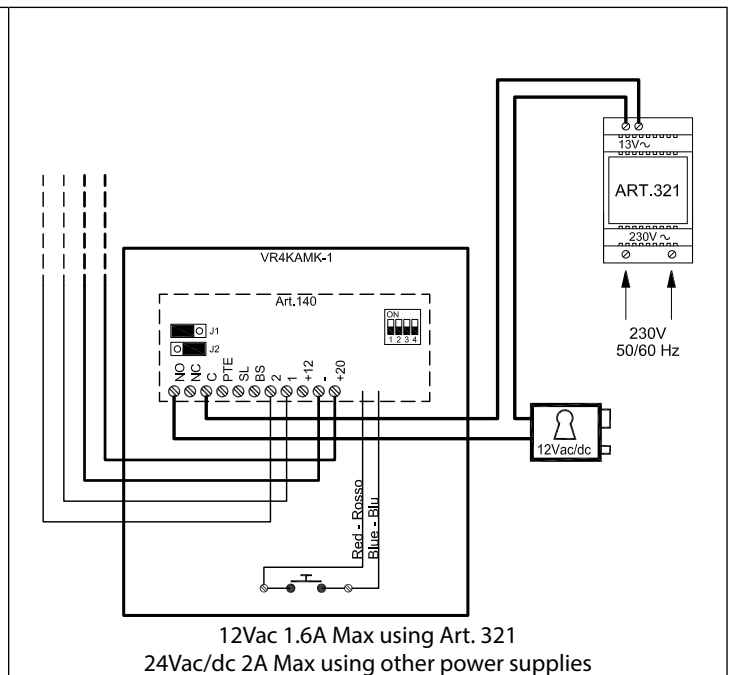
Fig. 3 Using capacitive discharge

Fig. 4 Using separate P.S.U.

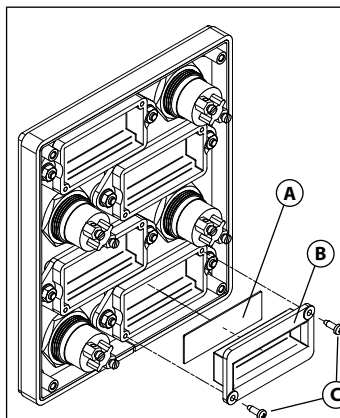
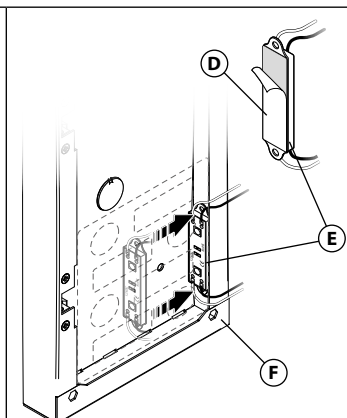
Art. VR4KAMK Speaker unit

NAME PLATE HOLDER AND LED MODULE INSTALLATION
NAME PLATE HOLDER INSTALLATION (FIG. 5)

1. Insert the name plate holder (A);
2. Insert the name plate support (B);
3. Insert the screws (C).

LED MODULE INSTALLATION (FIG. 6)

1. Remove the double-sided tape film (D) placed on the back of the LED module (E);
2. By applying moderate pressure, make the LED module (E) adhere to the right inner of the box (F) (flush or surface mounting) in correspondence to the central part of the module.

LED module electrical features: 10/15vdc - 20mA.

Fig. 5

Fig. 6
CONNECTION TERMINALS SIGNALS

NO	Door open relay normally open contact	MAX 24Vac/dc 2A
NC	Door open relay normally closed contact	
C	Door open relay common contact	
PTE	Active low input to control directly the door open relay	
SL	Active low output to enable the enslavement relay for video signal exchange (active with a call in progress)	
BS	Input/Output busy signal (approx 12V in stand-by, approx 0V with a call in progress)	
2	Speech line output from the microphone (approx 12V in stand-by, approx 3V with a conversation in progress)	
1	Speech line input toward the loudspeaker and data signal (approx 12V in stand-by, approx 5V with a conversation in progress)	
+12	12Vdc 0.3A max output to supply accessories	
—	Power input ground	
+20	Power input 16÷20Vdc	

TECHNICAL SPECIFICATIONS
Working voltage: Supplied by the BUS line, 20Vdc

Power consumption: Stand-by: 50mA
Max: 200mA

Working Temperature: -10 +50 °C

CLEANING OF THE PLATE

Use a clean and soft cloth. Use moderate warm water or non-aggressive cleansers.

Do not use:

- abrasive liquids;
- chlorine-based liquids;
- metal cleaning products.

Art. VR4901 Vandal resistant digital codelock module

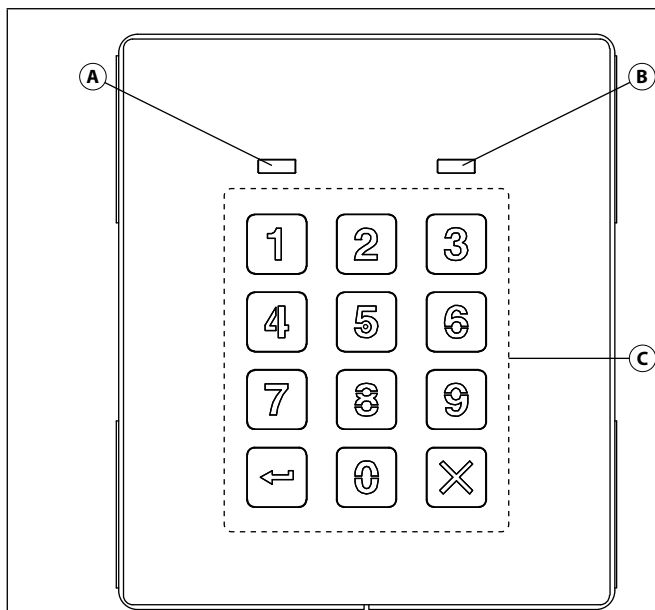


Fig. 1 Front

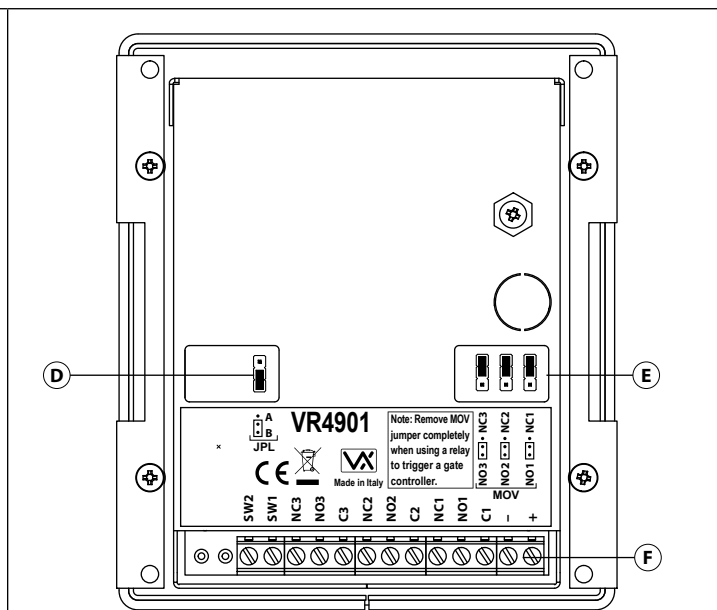


Fig. 2 Back

DESCRIPTION

The module features 12 buttons backlit keypad (Keys **0 - 9**, **ENTER** and **CLEAR**) and 2 LED's for progress information during use and programming. With three integral relays each with common, normally open and normally closed connections and two inputs to enable the external triggering of relays one and two (for example, push to exit button). Key presses are signalled both acoustically and visually while each button press has a tactile feel. Entering the correct code followed by **ENTER** will activate the relevant relay. Programming is carried out through the same keypad following a simple programming menu. The module can be combined with other 4000 Series modules in an audio or video intercom system.

MAIN FEATURES

- 3 **C**, **NC**, **NO** relay outputs (24Vac/dc – 5A max);
- 3 Programmable secret codes (one for each relay);
- Each relay can be set to be activated for a specific time (01 to 99 seconds) or to work as latch;
- Two active low inputs to command directly the relay 1 and 2;
- Programming menu guarded by a 4-8 digit programmable engineer's code;
- Visual and Acoustic signal during operating and programming;
- Keypad illumination LEDs;

LEGEND

- | | |
|--------------------|--------------------------|
| (A) Green LED | (D) JPL jumper |
| (B) Red LED | (E) MOV jumpers |
| (C) Backlit keypad | (F) Connection terminals |

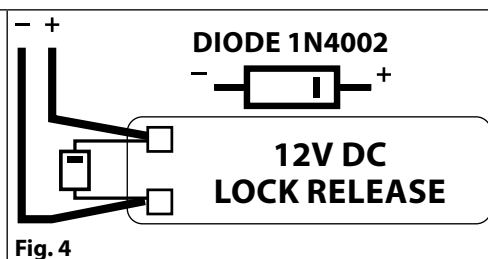
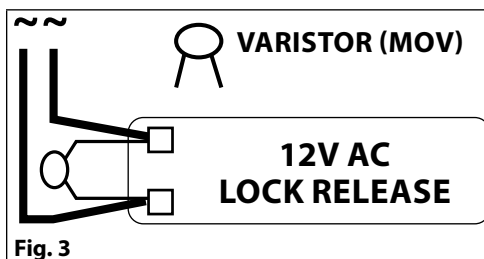
GENERAL DIRECTIONS FOR INSTALLATION

In order to achieve the best results from the schematics described it is necessary to install only original VIDEX equipment, strictly keeping to the items indicated on each schematic and follow these General Directions for Installation:

- The system must be installed according to national rules in force, in any case the running of cables of any intercom unit must be carried out separately from the mains;
- All multipair cables should be compliant to CW1308 specification (0.5mm twisted pair telephone cable).
- Cables for speech line and service should have a max resistance of 10 Ohm
- Lock release wires should be doubled up (Lock release wires and power supply wires should have a max resistance of 3 Ohm);
- The cable sizes above can be used for distances up to 50m. On distances above 50m the cable sizes should be increased to keep the overall resistance of the cable below the RESISTANCES indicated above;
- Double check the connections before power up;
- Power up the system then check all functions.

Art. VR4901 Digital codelock module**LOCK RELEASE BACK EMF PROTECTION**

A varistor must be fitted across the terminals on AC lock release (**Fig. 3**) and a diode must be fitted across the terminals on a DC lock release (**Fig. 4**) to suppress back EMF voltages. Connect the components to the lock releases as shown in figures.

**BUZZER BACK EMF**

When using intercoms with buzzer call (Art. 924/926, SMART1/2, 3101/2, 3001/2 and 3021/2) add one 0.1uF (100nF) capacitor between terminals 3 and 6 on the telephone.


BUILT-IN RELAYS – BACK EMF PROTECTION

The Art. VR4901 includes selectable back EMF protection on the relays. The jumpers marked **MOV** (one jumper for each relay) are used to select the protection type. When using a fail secure lock with connections **C & NO** the jumper should be in the **NO** position. When using a fail open lock with connections **C & NC** the jumper should be in the **NC** position and when using the codelock to trigger a gate controller or another third party controller the jumper should be removed completely (this disables the protection on the relay).

BACK LIGHT ADJUSTMENT JUMPER (JPL)

The jumper JPL (**Fig. 2, D**) is used to adjust the brightness and determine the operation of the backlit buttons. There are four brightness settings for the backlit buttons and two programming modes (mode 1 and 2) for the jumper.

The two modes that can be programmed change the functionality of the jumper JPL. The table below indicates the programming mode, the position of the jumper and the operation of the backlit buttons.

		Jumper Position	Back light Operation
Mode 1	A (default)		Back light on low brightness in standby. Full brightness when any buttons are pressed.
	B		Back light OFF in standby. Full brightness when any buttons are pressed.
Mode 2	A or B		Back light on full brightness all of the time.
	JPL removed in either Mode		No back light, the back light is completely disabled.

PROGRAMMING MODE 1 (DEFAULT MODE, JPL = A)

Follow the steps below to set the codelock to mode 1:

1. Disconnect the power from the Art. VR4901 codelock;
2. Short out terminals – and **SW2**;
3. Press and hold down button 1  and keep it pressed down while the power is switched back ON;
4. When power is restored to the codelock wait for the module to emit a single beep and the red status LED (**Fig.1, B**) to flash once;
5. Listen for the confirmation tone and wait for the red status LED (**Fig.1, B**) to flash once again;
6. Release button 1  and remove the short between terminals – and **SW2**;
7. Set the jumper JPL to the desired position.

PROGRAMMING MODE 2

Follow the steps below to set the codelock to mode 2:

1. Disconnect the power from the Art. VR4901 codelock;
2. Short out terminals – and **SW2**;
3. Press and hold down button 2  and keep it pressed down while the power is switched back ON;
4. When power is restored to the codelock wait for the module to emit a double beep and the red status LED (**Fig.1, B**) to flash once;
5. Listen for the confirmation tone and wait for the red status LED (**Fig.1, B**) to flash once again;
6. Release button 2  and remove the short between terminals – and **SW2**;
7. Set the jumper JPL to the desired position.

BACK LIGHT AND BUTTON OPERATION

If the back light programming mode is set to mode 1 (with jumper JPL in either the A or B position) when a button is pressed on the keypad the back light will switch to full brightness for approximately 10 seconds.

After this time the back light will either switch OFF or switch back to low brightness (depending on the jumper position) unless another button has been pressed within the 10 second period in which case the back light will stay on full brightness for a further 10 seconds. The exception to this is if the back light programming mode is set to mode 2, i.e. the back light will be on full brightness all of the time or if the jumper is removed the back light will be disabled.

Art. VR4901 Digital codelock module

PROGRAMMING

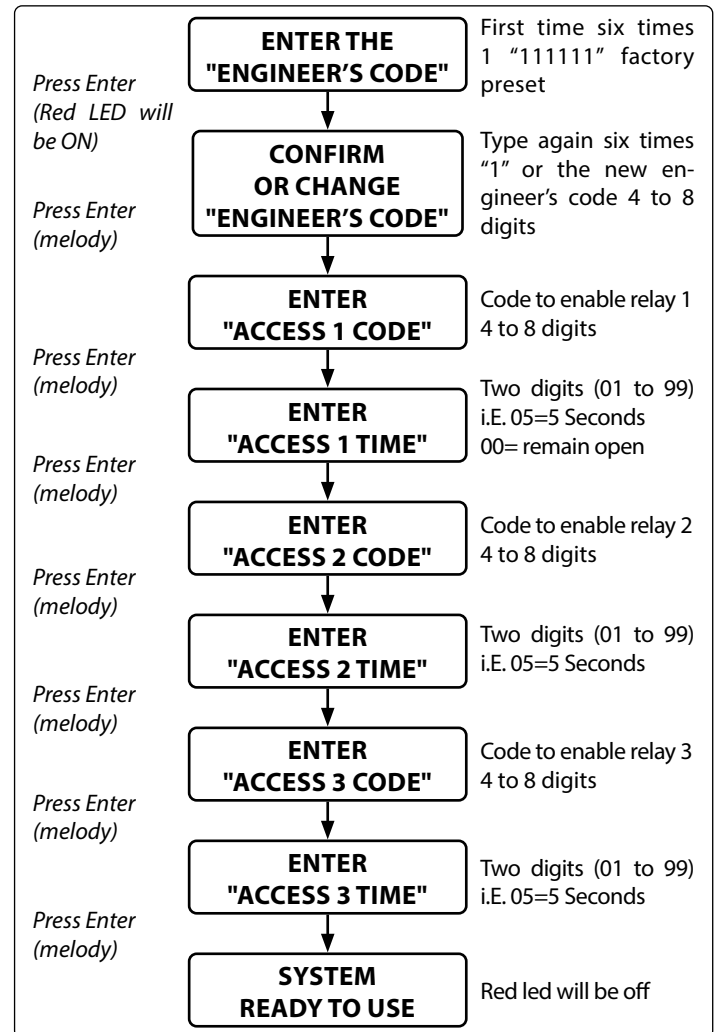
- Enter the **ENGINEER'S CODE**: first time type six times **1 (111111)** factory preset) and press **ENTER** (The red LED will illuminate);
- Confirm **ENGINEER'S CODE** (typing again the same) or type the new code (4 to 8 digits) then press **ENTER** (Melody). Pressing twice the **ENTER** button without changing the **ENGINEER'S CODE**, will exit from the programming;
- Enter the code (4 to 8 digits) to enable **RELAY 1** or re-enter the existing code then press **ENTER** (Melody);
- Enter the **RELAY 1** operation time (2 digits 01 to 99 **I.E.** 05=5 seconds, 00= remain open time) or re-enter the existing time then press **ENTER** (Melody);
- Enter the code (4 to 8 digits) to enable **RELAY 2** or re-enter the existing code then press **ENTER** (Melody);
- Enter the **RELAY 2** operation time (2 digits 01 to 99 **I.E.** 05=5 seconds, 00= remain open time) or re-enter the existing time then press **ENTER** (Melody);
- Enter the code (4 to 8 digits) to enable **RELAY 3** or re-enter the existing code then press **ENTER** (Melody);
- Enter the **RELAY 3** operation time (2 digits 01 to 99 **I.E.** 05=5 seconds, 00= remain open time) or re-enter the existing time then press **ENTER** (Melody);
- The system is ready to use (the red LED will be off).

PROGRAMMING NOTES

- After pressing enter following a command, press **ENTER** a further twice to exit the programming menu.

RETURN SYSTEM TO PRESET ENGINEER'S FACTORY CODE

- Turn off power to code lock;
- Keep **ENTER** button pressed while turning the power back on;
- Release **ENTER** button;
- The engineer's code is now set to **111111** (six times one).


OPERATION

- Type in the programmed code and press **ENTER**;
- If the code is correct, the green LED will illuminate for approx. 2 seconds and the relay relevant to the code will operate for the programmed time;
- If a wrong code is entered, a continuous melody will sound for 4 or more seconds, according to the number of mistakes;
- To switch off any relay while operating, type in the relevant code then press the **CLEAR** button;

CONNECTION TERMINALS SIGNALS

SW2	Relay 2 command signal (active low)	Max 24Vac/dc 3A
SW1	Relay 1 command signal (active low)	
NC3	Relay 3 normally closed contact	
NO3	Relay 3 normally open contact	
C3	Relay 3 common contact	
NC2	Relay 2 normally closed contact	
NO2	Relay 2 normally open contact	
C2	Relay 2 common contact	
NC1	Relay 1 normally closed contact	
NO1	Relay 1 normally open contact	
C1	Relay 1 common contact	
-	12/24Vac/dc power input	
+		

OPERATION NOTES

- To operate relays together, set the same code for each relay;
- If a wrong code is entered, the system will lock out for 5 seconds which will increase each time a wrong code is entered. The system will operate only when the correct code is entered.

CLEANING OF THE PLATE

Use a clean and soft cloth. Use moderate warm water or non-aggressive cleansers.

Do not use:

- abrasive liquids;
- chlorine-based liquids;
- metal cleaning products.


TECHNICAL SPECIFICATION

Power Supply:	12/24 Vac/dc – 2VA
Power Consumption:	Stand-by: 20mA
	Operating: 70mA
Working Temperature:	-10 +50° C

4000 Series

Surface and flush mounting door station installation

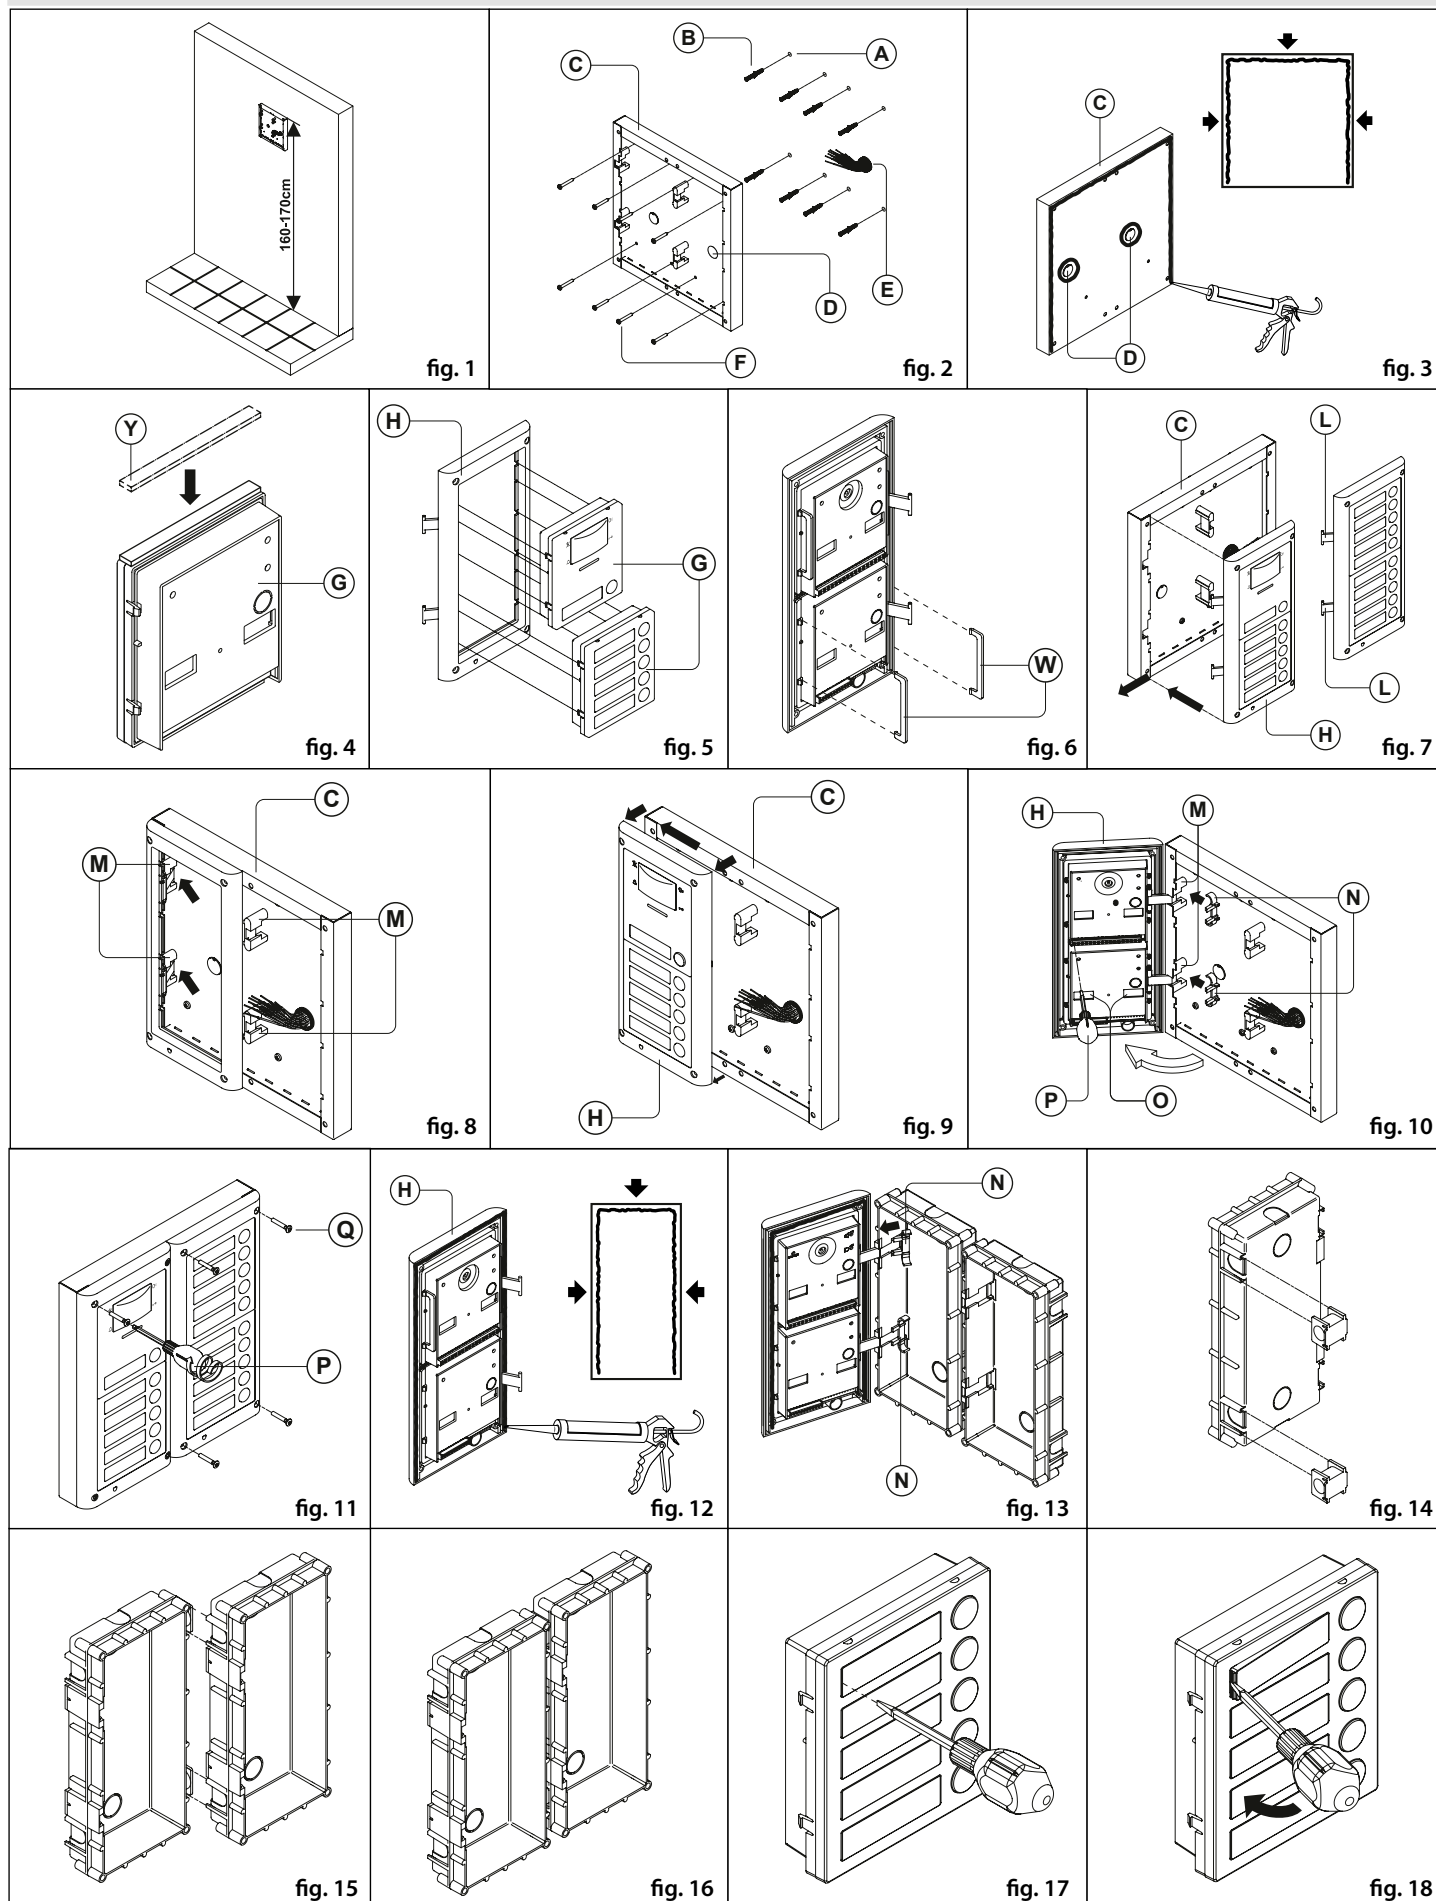EXAMPLE: INSTALLING A FOUR MODULE OUTDOOR STATION



INSTALLING A SURFACE MOUNT DOOR STATION

1. Place the surface box against the wall (165-170cm between the top of the box and the floor level as shown in **Fig. 1**) and mark the fixing holes for the wall plugs and the hole for the cables **(E)** (**fig. 2**). Observe the orientation of the box with the hinge on the left;

⚠ In order to prevent water ingress we highly recommend using a silicon sealant between the wall and the back box **(C) ON THE LEFT, TOP AND RIGHT SIDES ONLY AND AROUND ALL HOLES **(D)**. DON'T USE SILICON SEALANT ON THE BOTTOM SIDE OF THE BACK BOX (Fig.3);**

2. As shown on **Fig. 2**, drill the fixing holes **(A)**, insert the wall plugs **(B)** and feed the cables **(E)** through the surface box opening **(D)**, fix surface box **(C)** to the wall using the screws **(F)**;
3. Apply the **(Y)** silicon sealant on top of each module as shown in **Fig. 4**;
4. Before installation of the module support frame, hook the modules **(G)** to the support frame **(H)** as shown in **Fig. 5** then, as shown in **Fig. 6**, fit the two anti-tampering locks **(W)** for each module (do the same for the second module support frame);
5. When you have more than one support frame, hook the support frame to the surface box starting from the left. For convenience we will described how to attach the left frame but the same must be carried out for the right frame. As shown in **Fig. 7**, hook the module support frame **(H)** (complete with modules) to the surface box **(C)** moving the frame as suggested from pointers. Ensure that the pivots **(L)** (**Fig. 7**) go inside the relevant housing **(M)** as shown in **Fig. 8**;
6. As shown on **Fig. 9**, pull back the module support frame **(H)** while moving it slightly to the left as suggested by the pointers;
7. As shown in **Fig. 10**, open the module support frame **(H)** as suggested by the pointer, hook the hinge locks **(N)** to the hinges **(M)**, make the required connections using the screwdriver provided **(P)** (flat blade end) and make the required adjustment by adjusting the settings (through openings **(O)**) and adjust trimmers;
8. Repeat the same operations described above for the second module support frame (or for the third if available);
9. When the system has been tested and is working correctly, move back the module support frames carefully, fix them to the surface box using the screwdriver provided **(P)** (torx end) and the pin machine torx screws **(Q)** (**Fig. 11**). **Note: do not over tighten the screws more than is necessary.**

INSTALLING A FLUSH MOUNTING DOOR STATION

When flush mounting and the number of modules is greater than 3, the required back boxes need to be linked together (before embedding them in the wall) as shown on **Fig. 14, 15 and 16**:

- Arrange the back boxes and remove knockouts to allow cables to be fed from one back box to the other;
 - Hook the spacers to first back box then hook the second back box to obtain the result shown on **Fig. 16**;
1. Protect the module support frame fixing holes from dust then embed the back box into the wall (165-170cm between the top of the box and the floor level as shown on the **Fig. 1**) feeding the cables **(E)** (**Fig. 2**) through a previously opened hole in the box. Observe the direction of the box ensuring the hinge is on the left and take care that the box profile is in line with the finished wall profile;

⚠ In order to prevent water ingress we highly recommend using a silicon sealant between the module support frame **(H) and the back box ON THE LEFT, TOP AND RIGHT SIDES ONLY. DON'T USE SILICON SEALANT ON THE BOTTOM SIDE OF THE MODULE SUPPORT FRAME (Fig.12);**

2. Continue from step 4 of surface mounting instructions, but at step 7 hook the hinge locks **(N)** as shown on **Fig. 13**.

⚠ Note: if additional holes are made in the surface box, oxidation problems may appear unless the unprotected metal is coated with a protective paint.

NOTES

- The screwdriver's blade has two sides, one flat and one torx, to select one of them unplug the blade from the screwdriver body and plug it into the required side.
- The example shows the use of only one back box bottom hole for wires, this is done to keep file drawings clear. Naturally the installer can use the left hole or the right or both if required.

HOW TO REMOVE THE CARD NAME HOLDER

- To avoid damage to the module front plate, tape the side that will be in contact with the screwdriver blade;
- Insert the screwdriver (flat side) into the card-holder hole as shown in **Fig. 17**;
- Move the screwdriver to the left as shown in **Fig. 18** to extract the card name holder;
- Edit the card name then replace it inside the holder and refit: insert the holder inside its housing from the left or right side then push the other side until it clips into place.

Art. 6758 7" hands free colour display digital videomonitor

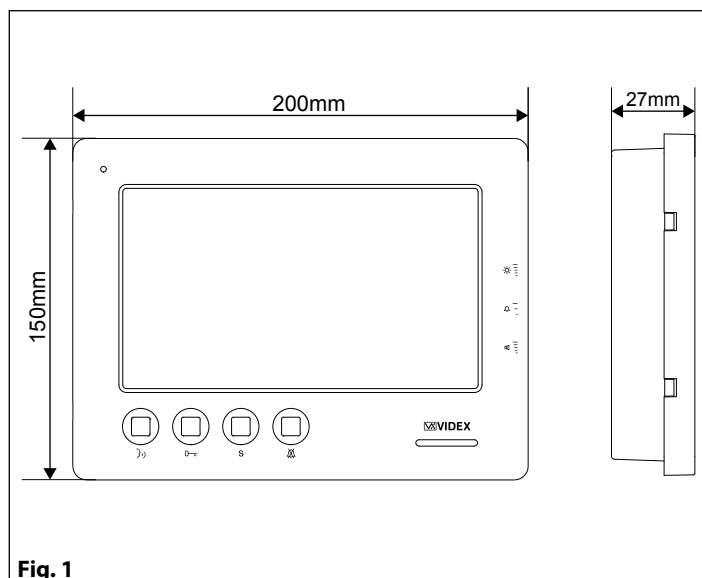


Fig. 1

DESCRIPTION

Surface mount hands free videophone incorporating a 7" Hi-Res full colour active matrix LCD monitor specific for "6 wire" videokit (VK4K, VRVK and VK8K range). It includes 4 buttons: "camera recall" "open door" "service" and "privacy".

3 LED's* indicate the privacy activated, open door and activated functions.

Programmable privacy duration, melody type and number of rings. Intercommunicating call and door call.

Adjustments: call tone volume switch (3 levels), picture hue, contrast and brightness.

* The operation of some LED's and the functions described may require additional cabling.

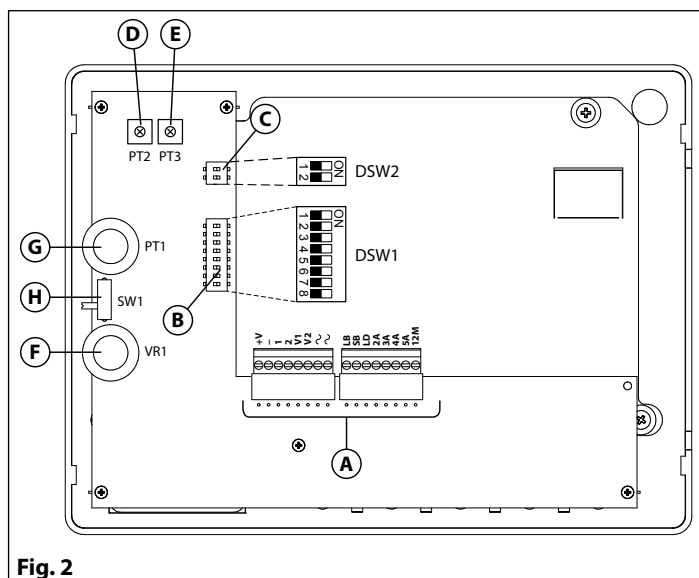


Fig. 2

LEGEND

- (A) Connection terminals
- (B) 8 Way dip switch bank to set videophone address
- (C) 2 Way dip switch bank to set video mode
- (D) Hue adjustment trimmer
- (E) Contrast adjustment trimmer*
- (F) Speech volume control
- (G) Brightness control
- (H) Call tone volume switch

* Not available in some LCD versions.

PUSH BUTTONS

S	Service push button. Shorts the SB terminal to GROUND (open collector 24Vdc 100mA max) while the button remain pressed.
	Privacy ON-OFF button. When the system is in stand-by, the pressing of this button activates (LED switched on) or disables (LED switched off) the "privacy" service. The service is automatically disabled when the programmed privacy time expires. When the service is enabled the videophone does not receive calls.
	Door-open / intercommunicating call button. With speech lines open to the entrance panel, press this button to open the door. If the terminal LD is properly connected the relevant LED remains switched ON until the door is closed. <u>Intercommunication only works when the system is in the stand-by condition.</u> Switch 4 of the SW1 dip-switch selects the type of intercommunication: OFF Intercommunication between two apartments - press the key button to call the videophone(s) in the other apartment. A busy tone will signal that the other videophone is in conversation with the door station and so cannot be called. ON Intercommunication between videophones in the same apartment - press the key button one, two, three or four times to call videophone with extension address 1, 2, 3 or 4 (Set on dip-switches 2&3 of SW1). <u>Any intercommunicating conversation is always interrupted by an external call (i.e. External calls take priority).</u> Intercommunication push button. For an intercommunicating call, press as many times as the extension or address value to call (see SW3 Intercommunication Settings).

PUSH BUTTONS

	Answer push button. On an incoming call, pressing this button allows the user to answer and converse with the visitor. The relevant LED will illuminate.
	Switch off button. With the system switched on (monitor on), momentary operation of the button will switch the video monitor off. The videomonitor will also automatically switch off after a time delay if the button is not pressed. The relevant LED will switch off.
	Camera recall button. Press the button (Press once for door/gate 1, twice for 2 and so on up to a maximum of 4 entrances): the relevant LED switches ON and the monitor switches on showing the video from the door panel. The speech is also live and the door can be opened by pressing  .
	Simplex button. Pressing and holding the button for more than 3 seconds will switch the videomonitor into SIMPLEX speech mode. Press and hold the button to speak to the caller ( LED will flash rapidly), release the button to listen ( LED will flash slowly). If the button is not pressed for 10 seconds the videomonitor will switch off. The videomonitor will revert to duplex speech when another call is made.

LEDS


	Privacy on LED It illuminates when the privacy service is enabled.
	Generic use LED It is controlled from the terminals +DOL and -DOL. Normally used to signal the door status (open or closed).
	ON LED It illuminates when the videophone is switched ON.

CONTROLS AND ADJUSTMENTS

	PT1	Brightness control (sliding wheel).
	SW1	Call tone volume control (3 levels).
	VR1	Speech volume control (sliding wheel).
PT2	Colour intensity control trimmer (rotate left to increase or right to decrease).	
PT3	Contrast control trimmer* (rotate left to increase or right to decrease). *Not available in some LCD versions.	

SETTINGS (DIP-SWITCH)

The videophone setup is carried out by the 2 dip-switch banks.

 SW1	Switch 1 OFF ON	Apartment Address 1 2
 SW1	Switches 2,3 OFF OFF ON OFF OFF ON ON ON	Extension Address 1 2 3 4
 SW1	Switch 4 OFF ON	Intercommunication Between videophones in another apartment Between videophones in the same apartment
 SW1	Switches 5,6 OFF OFF ON OFF OFF ON ON ON	Number of rings 2 4 6 8
 SW1	Switches 7,8 OFF OFF ON OFF OFF ON ON ON	Privacy duration time 15 minutes 1 hours 4 hours 8 hours

2 WAY DIP-SWITCH (SW2)



The two way dip-switch adjusts the impedance of the video signal. The default setting is "ON" for both switches (75 Ohm): when there are more videophones in parallel connection (without video distributor) both switches must be "ON" only on the last videophone (looking at the connection order) while for all other videophones both switches must be set to "OFF".

MELODY TYPE SETTING

1. Press and keep pressed **0** button for 10 seconds to enter melody type programming mode: the unit plays the current melody and then a "beep";
2. After the "beep" press **0** buttons to select the next melody: a new melody will play for some seconds then the unit emits a "beep". There are 9 melodies available. **Note:** press **0** buttons only after the melody is over and the unit emits the "beep";
3. When desired melody is playing, wait for some seconds: the unit completes the melody and emits a "beep", then the unit emits a double "beep" that confirms the new setting is properly stored;
4. The unit returns to stand-by mode.

CONNECTION TERMINALS SIGNALS

+V	20Vdc Input/Output (As input 16÷20Vdc 0,5A – as output 20Vdc 0,5A max)
-	Ground reference for +V terminal.
1	Speech line output from microphone and data signal (Approx. 12V in stand-by, 5V during a conversation)
2	Speech line input toward the loudspeaker (Approx. 12V in stand-by, approx. 3V during a conversation)
V1	Balanced video signal 1 sync.-
V2	Balanced video signal 2 sync.+
	24Vac 1A max power input
	
LB	Local call input (5V in standby, 0V to trigger)
SB	Service button (open collector) active low output. The button goes active when the button is pressed (Open Collector 24Vdc 100mA max)
LD	12Vdc input for door-open LED
2A	Speech line input toward the loudspeaker of the parallel telephone (Approx. 12V in stand-by, 3V during a conversation)
3A	Output switched ground for parallel telephone
4A	Output call tone for parallel telephone
5A	Input for door-open command from parallel telephone
12M	12Vdc power supply for Memory Board version (optional)

MEMORY BOARD

This device is also available in the version with memory board (Art. 6758/VM).

If you have that version, please refer to the "**6200, 6300, 6400 and 6700 Series Memory Board**" user manual (in English and Italian) for installation and use.

The manual is available for download: click/tap or scan the QR code.



TECHNICAL SPECIFICATION

Power Supply:	24Vac in or 20Vdc in
Power consumption:	Stand-by: 50mA Max Operating: 400mA Max
Working Temperature:	-10 +50 °C

6700 Series Wall mounting instructions

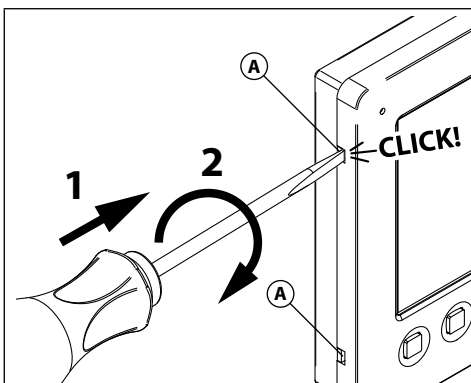


Fig. 1

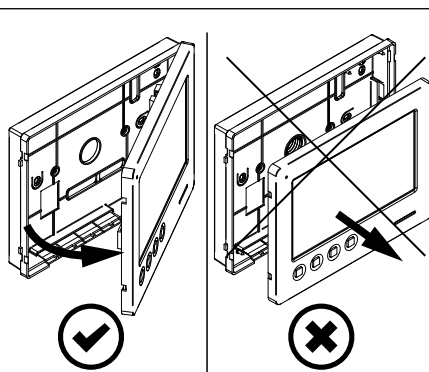


Fig. 2

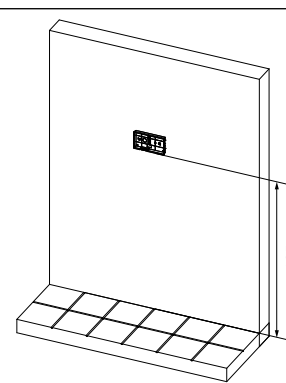


Fig. 3

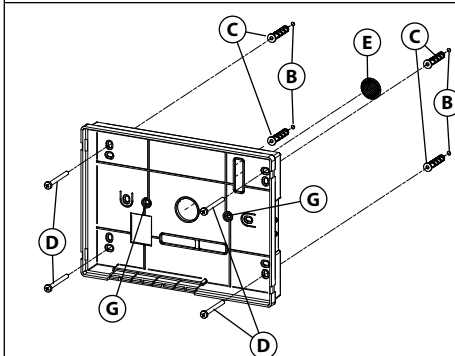


Fig. 4

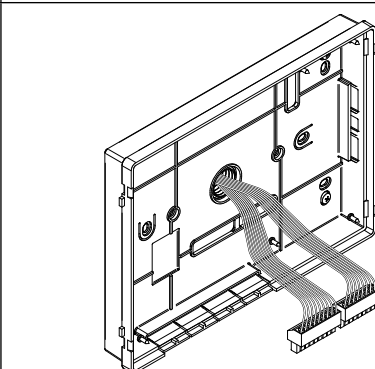


Fig. 5

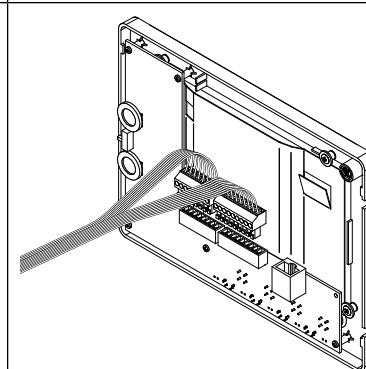


Fig. 6

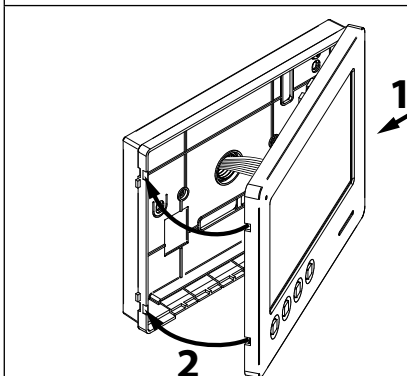


Fig. 7

1. In order to install the videophone, it is necessary to remove the cover, which contains all the electronics, from the base: insert a 5.5mm flat screw driver into the clip (A) then rotate clockwise until you listen a "CLICK!". Repeat the same operation with the other clip as shown in Fig. 1.
2. Pull outwards the left part of the cover as shown in Fig. 2. **Don't pull the cover straight.**
3. Put the base of the unit on the wall at approx 135cm from the finished floor (Fig. 3) to match the points for the fixing holes (B) (Fig. 4) remembering that the wires (E) (Fig. 4) must be fed through the large hole (F) (Fig. 4). If you use the flush mounting box 503, embed it into the wall vertically at approx. 140cm from the finished floor and the base.
4. Following Fig. 4, make the holes (B), insert the wall plugs (C) and fix the base with the screws (D) feeding the wires (E) through the hole (F). If you have used the box 503, fix the base to the wall through the holes (G) using the screws (D).
5. As shown in Fig. 5, connect the wires to the removable terminals following the provided installation diagram. Connect the terminal blocks to the electronics contained in the cover as shown in Fig. 6. Test system before closing. Contrast and hue trimmers can be adjusted only if the videophone is open. To activate the display and see changes use the "Camera Recall" function by pressing  button.
Note: while testing the system, it is advisable to hold the cover with your hand.
6. Once testing is complete and all the necessary adjustments are made, close the unit as shown in Fig. 7: first hook in the right part and then the left part until you hear a "CLICK!".

Art. 316 - Art. 316N

4 Way video distributor for system with balanced video signal

DESCRIPTION

ART. 316

4 Way video distributor for systems with balanced video signal. In white plastic ABS box 11x70x30mm surface mount.

ART. 316N

As Art. 316 but small form factor without terminals to connect "+" (plus) and "-" (minus) from videophones (is required an external connection of these terminals). It is housed in a 50X60X20 mm plastic box which is for surface mounting.



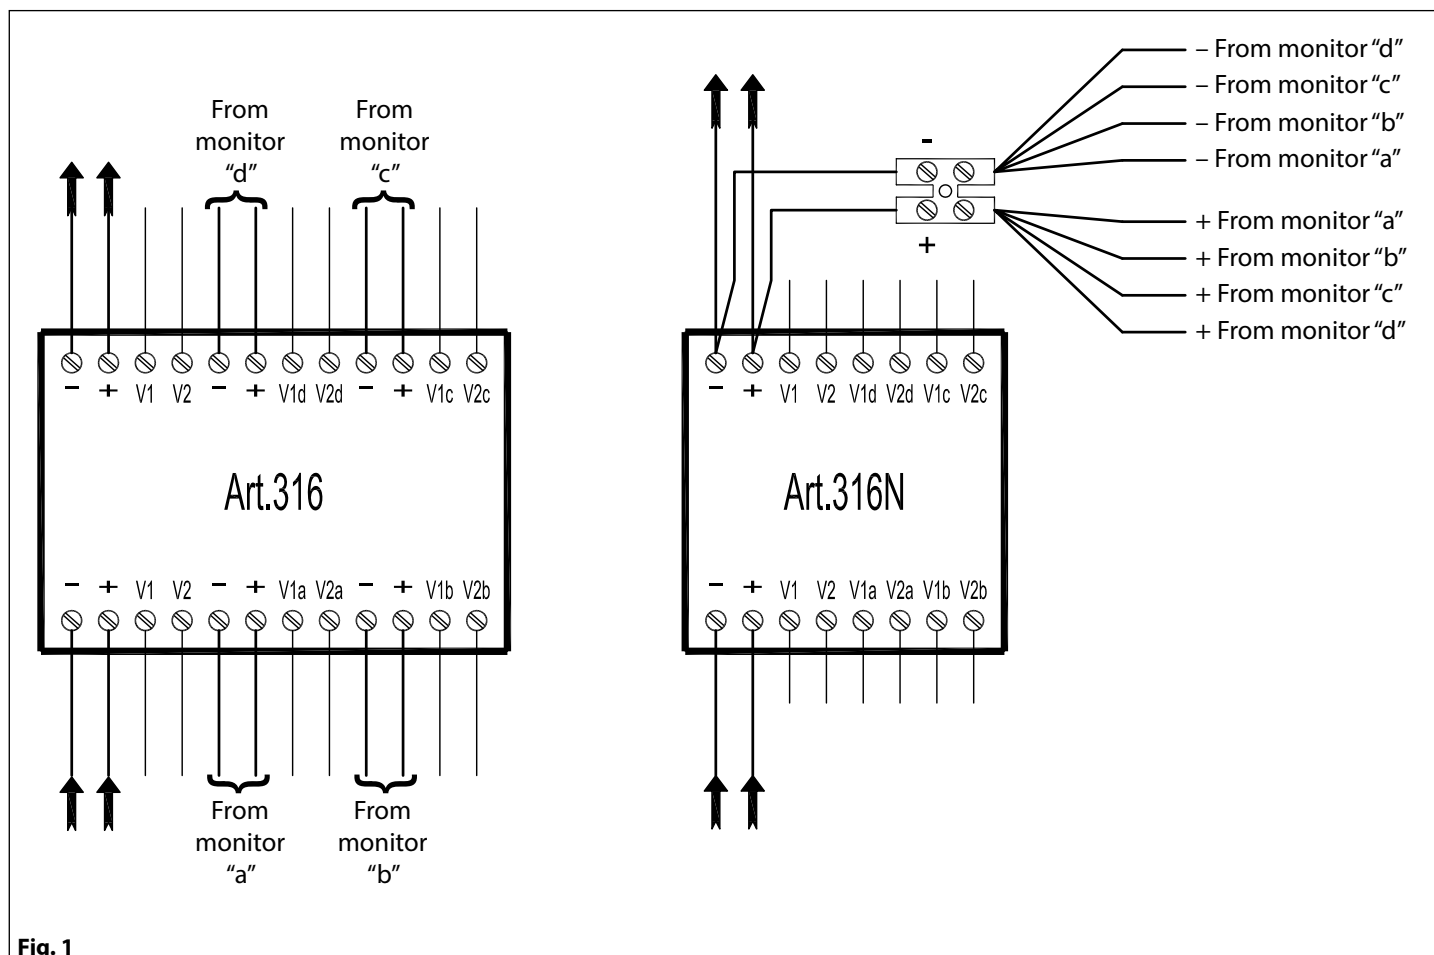
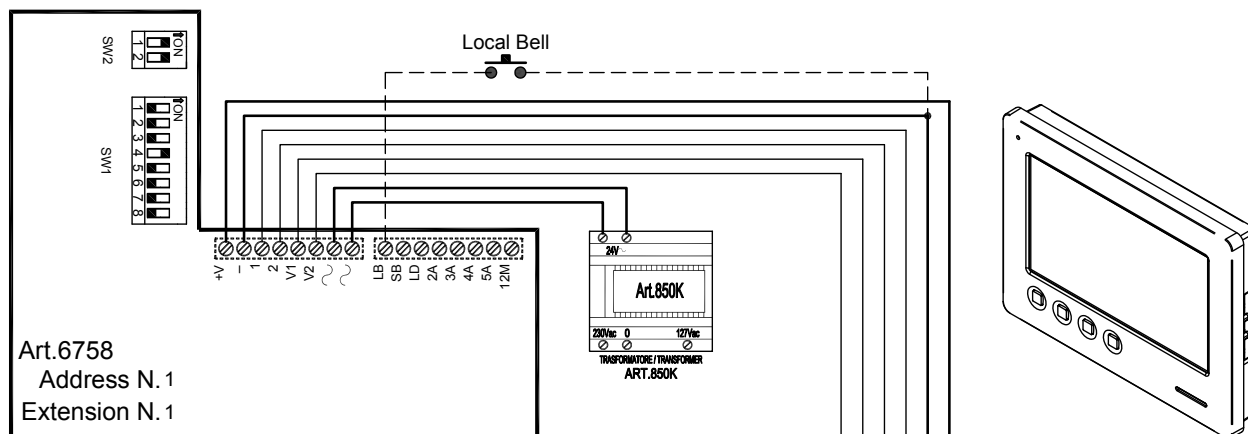
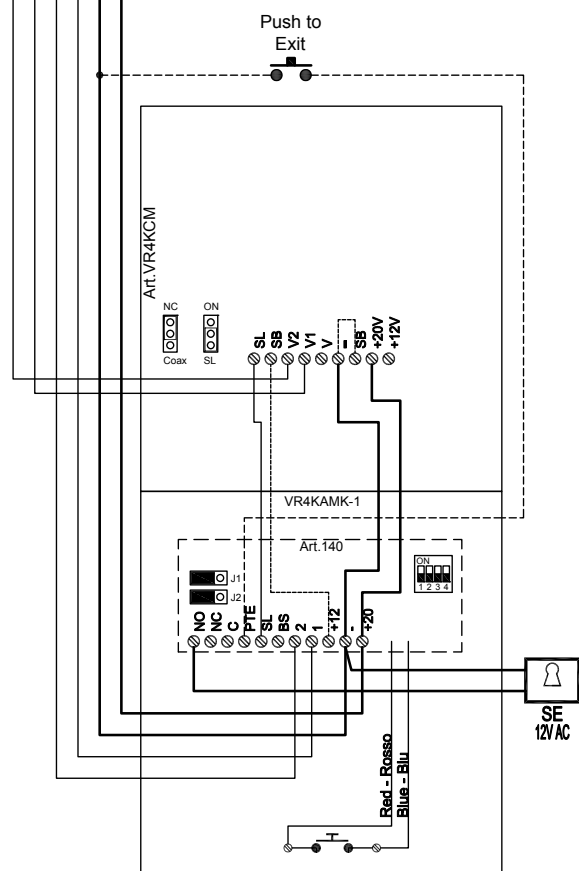


Fig. 1

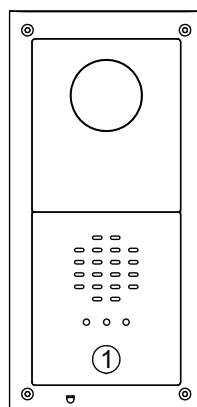

Affinche qualsiasi modifica alle impostazioni dei dip switch del videocitofono o del posto esterno venga riconosciuta dal sistema, è necessario togliere l'alimentazione di rete all'impianto e restituirla.

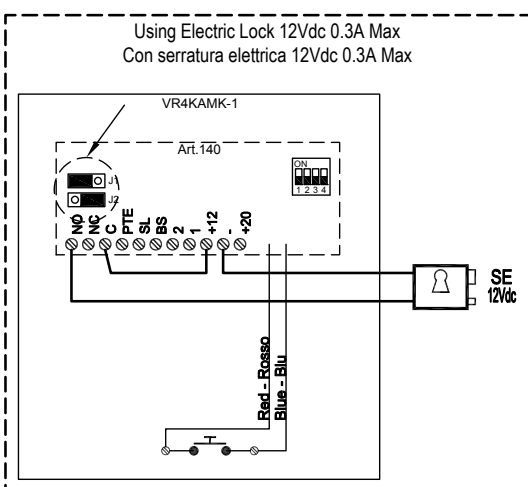In order to make the system recognize any modification of the videophone's and outdoor station's dip-switch setting temporarily disconnect the system from the mains and reconnect



Title:
VRVK-1/6758, VRVK-1S/6758

Trick:
VRVK-1/6758, VRVK-1S/6758



Videx Electronics S.p.A.

Via del Lavoro 1, 63846 Monte Giberto (FM)

Phone: +39 0734 631669 - Fax +39 0734 631669

www.videx.it - info@videx.it

Notes:

.

Note:

.

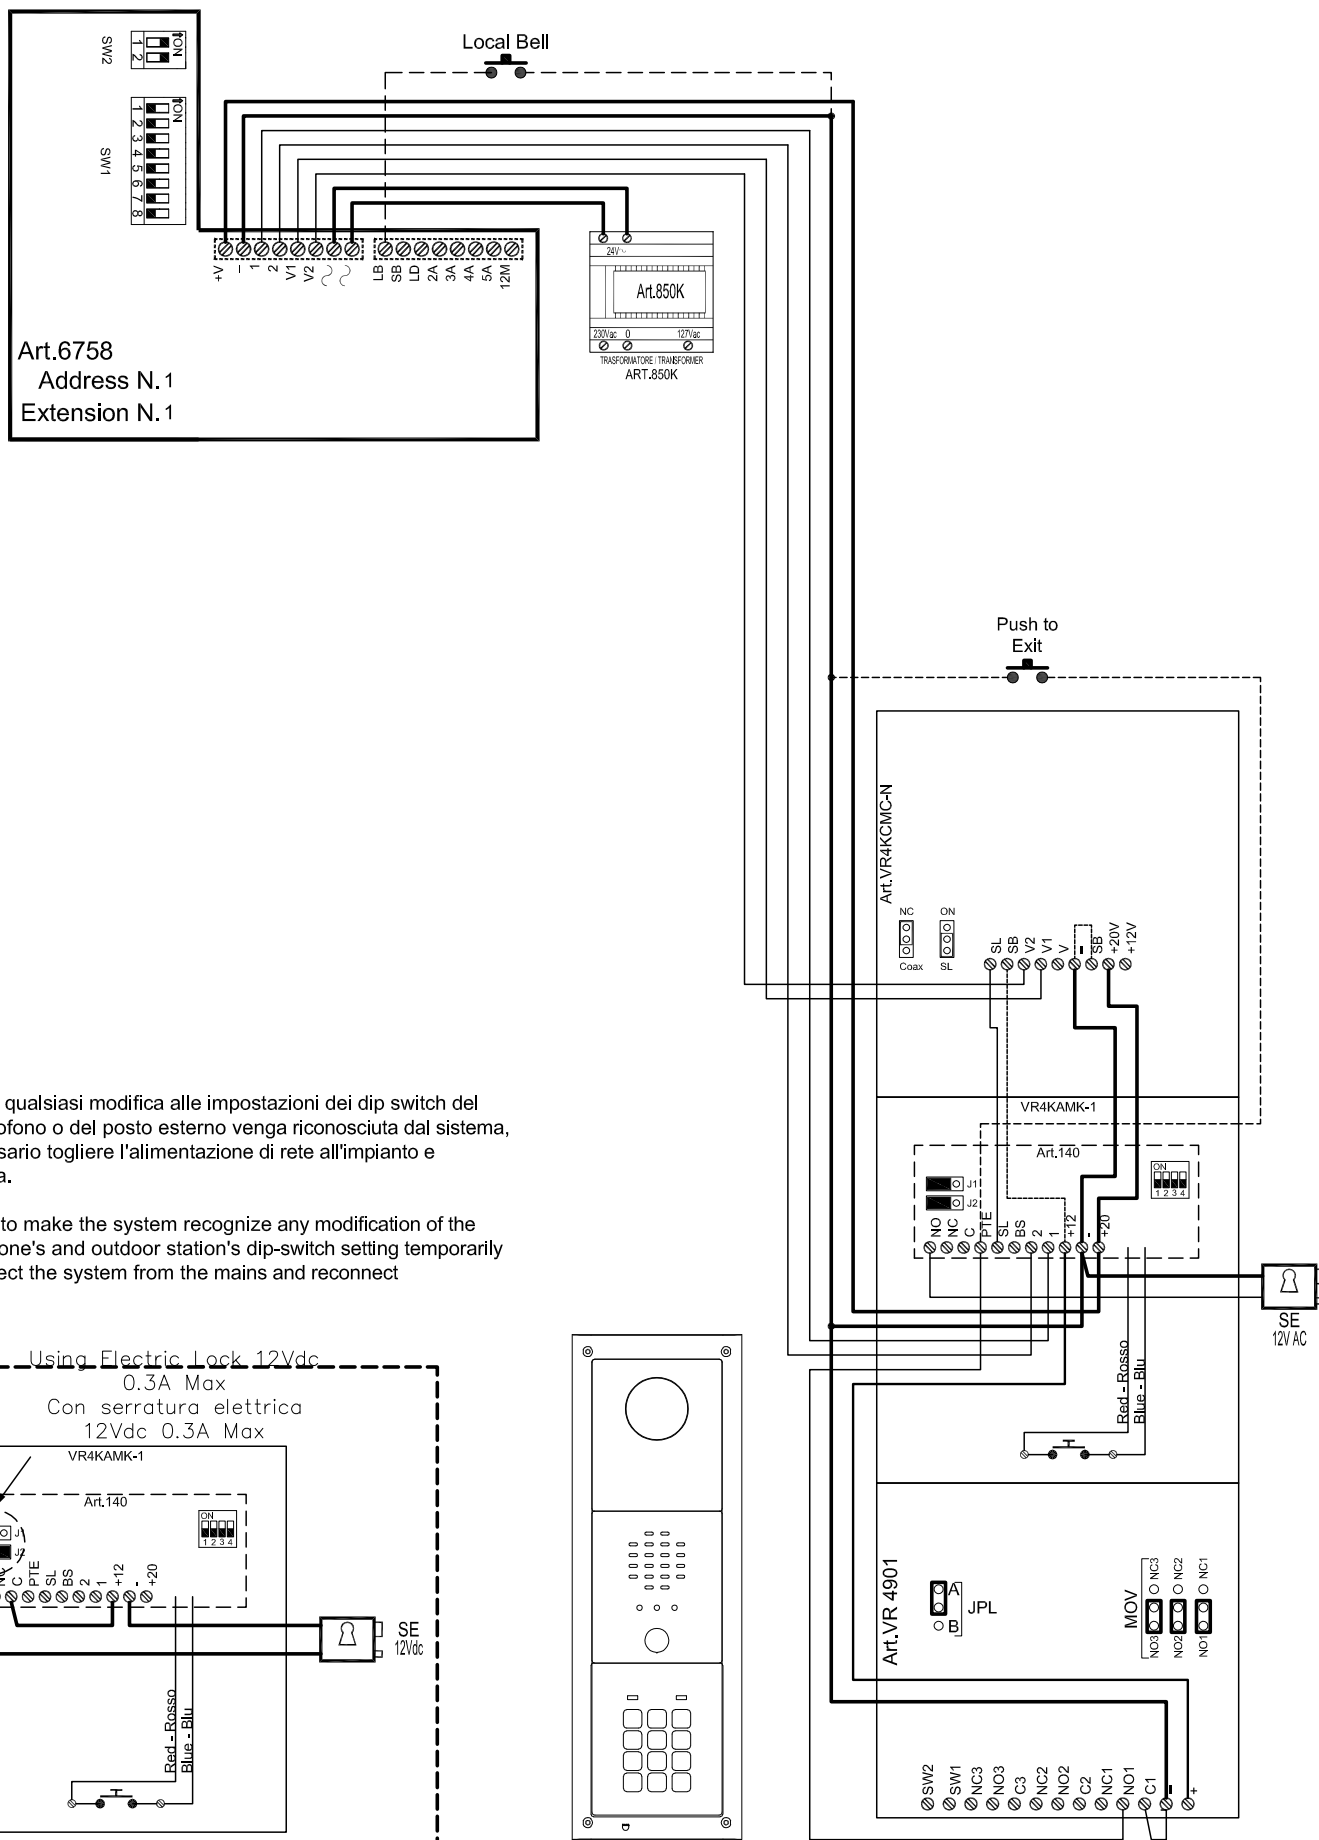
Data creazione:
07/02/2017

Data modifica:
27/02/2017

Autore:
Marco Rongoni

Cod. File:
vrvk67h-001.dwg


Foglio
1 / 1




Affinche qualsiasi modifica alle impostazioni dei dip switch del videocitofono o del posto esterno venga riconosciuta dal sistema, è necessario togliere l'alimentazione di rete all'impianto e restituirla.

In order to make the system recognize any modification of the videophone's and outdoor station's dip-switch setting temporarily disconnect the system from the mains and reconnect

Title: _____ Titolo: _____		Data creazione: 05/11/2019 Foglio 1 / 1
	Videx Electronics S.p.A. Via del Lavoro 1, 63846 Monte Giberto (FM) Phone: +39 0734 631669 - Fax: +39 0734 631669 www.videx.it - info@videx.it	Notes: VRVKC-1/6758, VRVKC-1S/6758 Note: _____ Autore: Roberto Gambini Cod. File: vrvk67h-003c.dwg

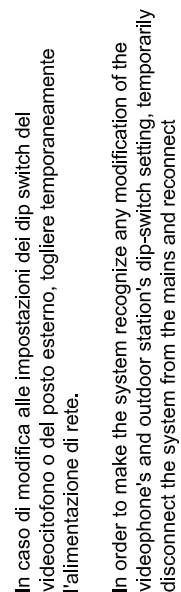


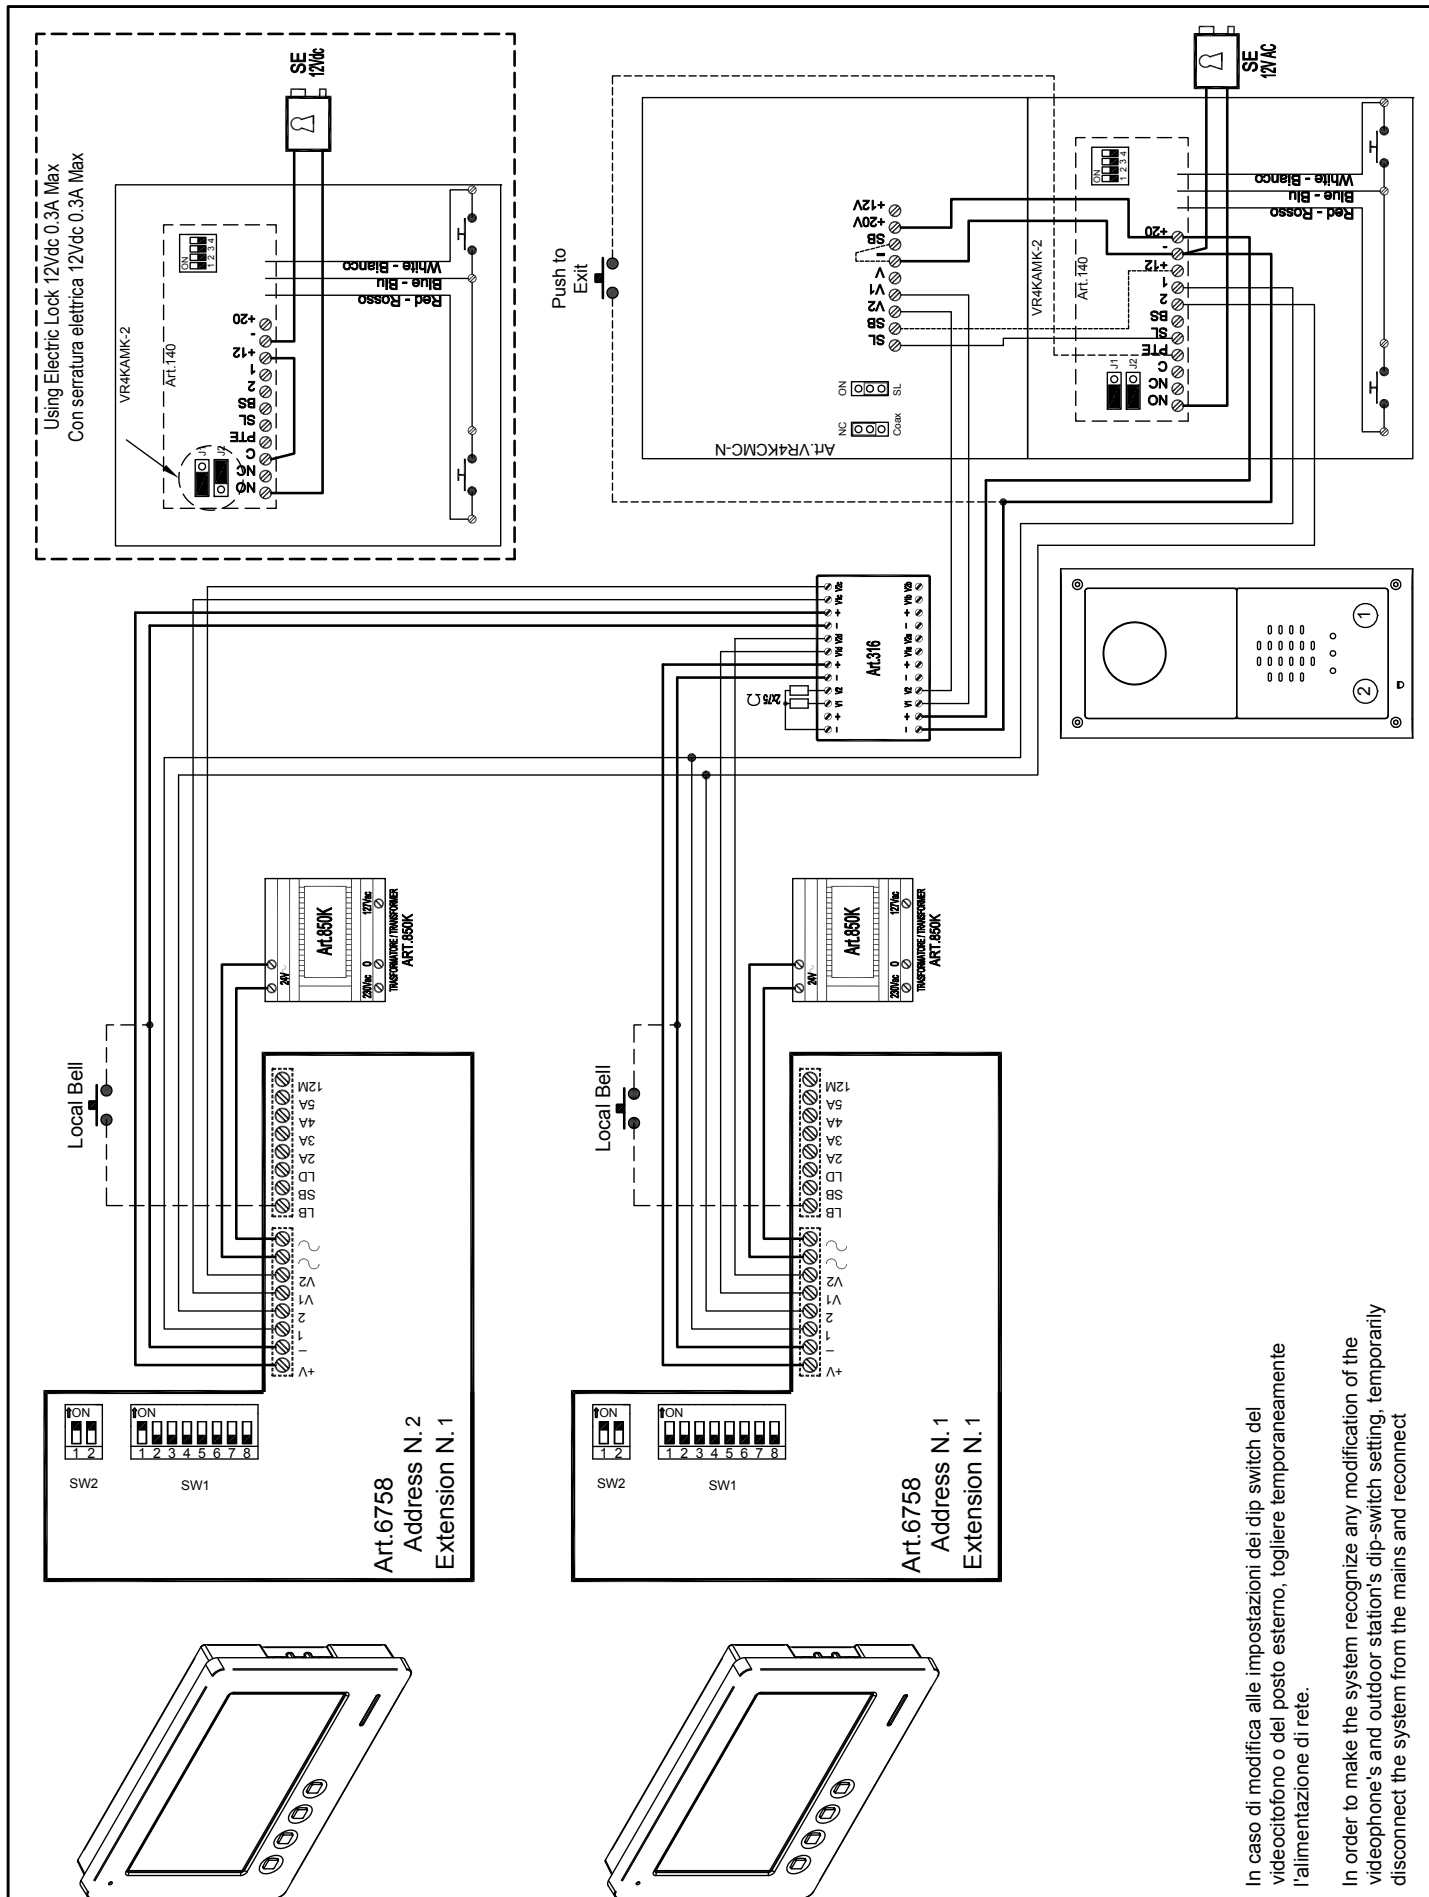

In caso di modifica alle impostazioni dei dip switch del videocitofono o del posto esterno, togliere temporaneamente l'alimentazione di rete.

In order to make the system recognize any modification of the videophone's and outdoor station's dip-switch setting, temporarily disconnect the system from the mains and reconnect

Title: VRVK-2/6758, VRVK-2S/6758		Data creazione: 07/02/2017		Foglio 1 / 1
Tubo: VRVK-2/6758, VRVK-2S/6758		Data modifica: 27/02/2017		
	Videx Electronics S.p.A.	Autore: Marco Rongoni		
	Via del Lavoro 1, 63946 Monte Giberto (FM)	Cod. File: vrvk67h-005.dwg		
	Phone: +39 0734 631669 - Fax +39 0734 631669 www.videx.it - info@videx.it	Note: Note:		

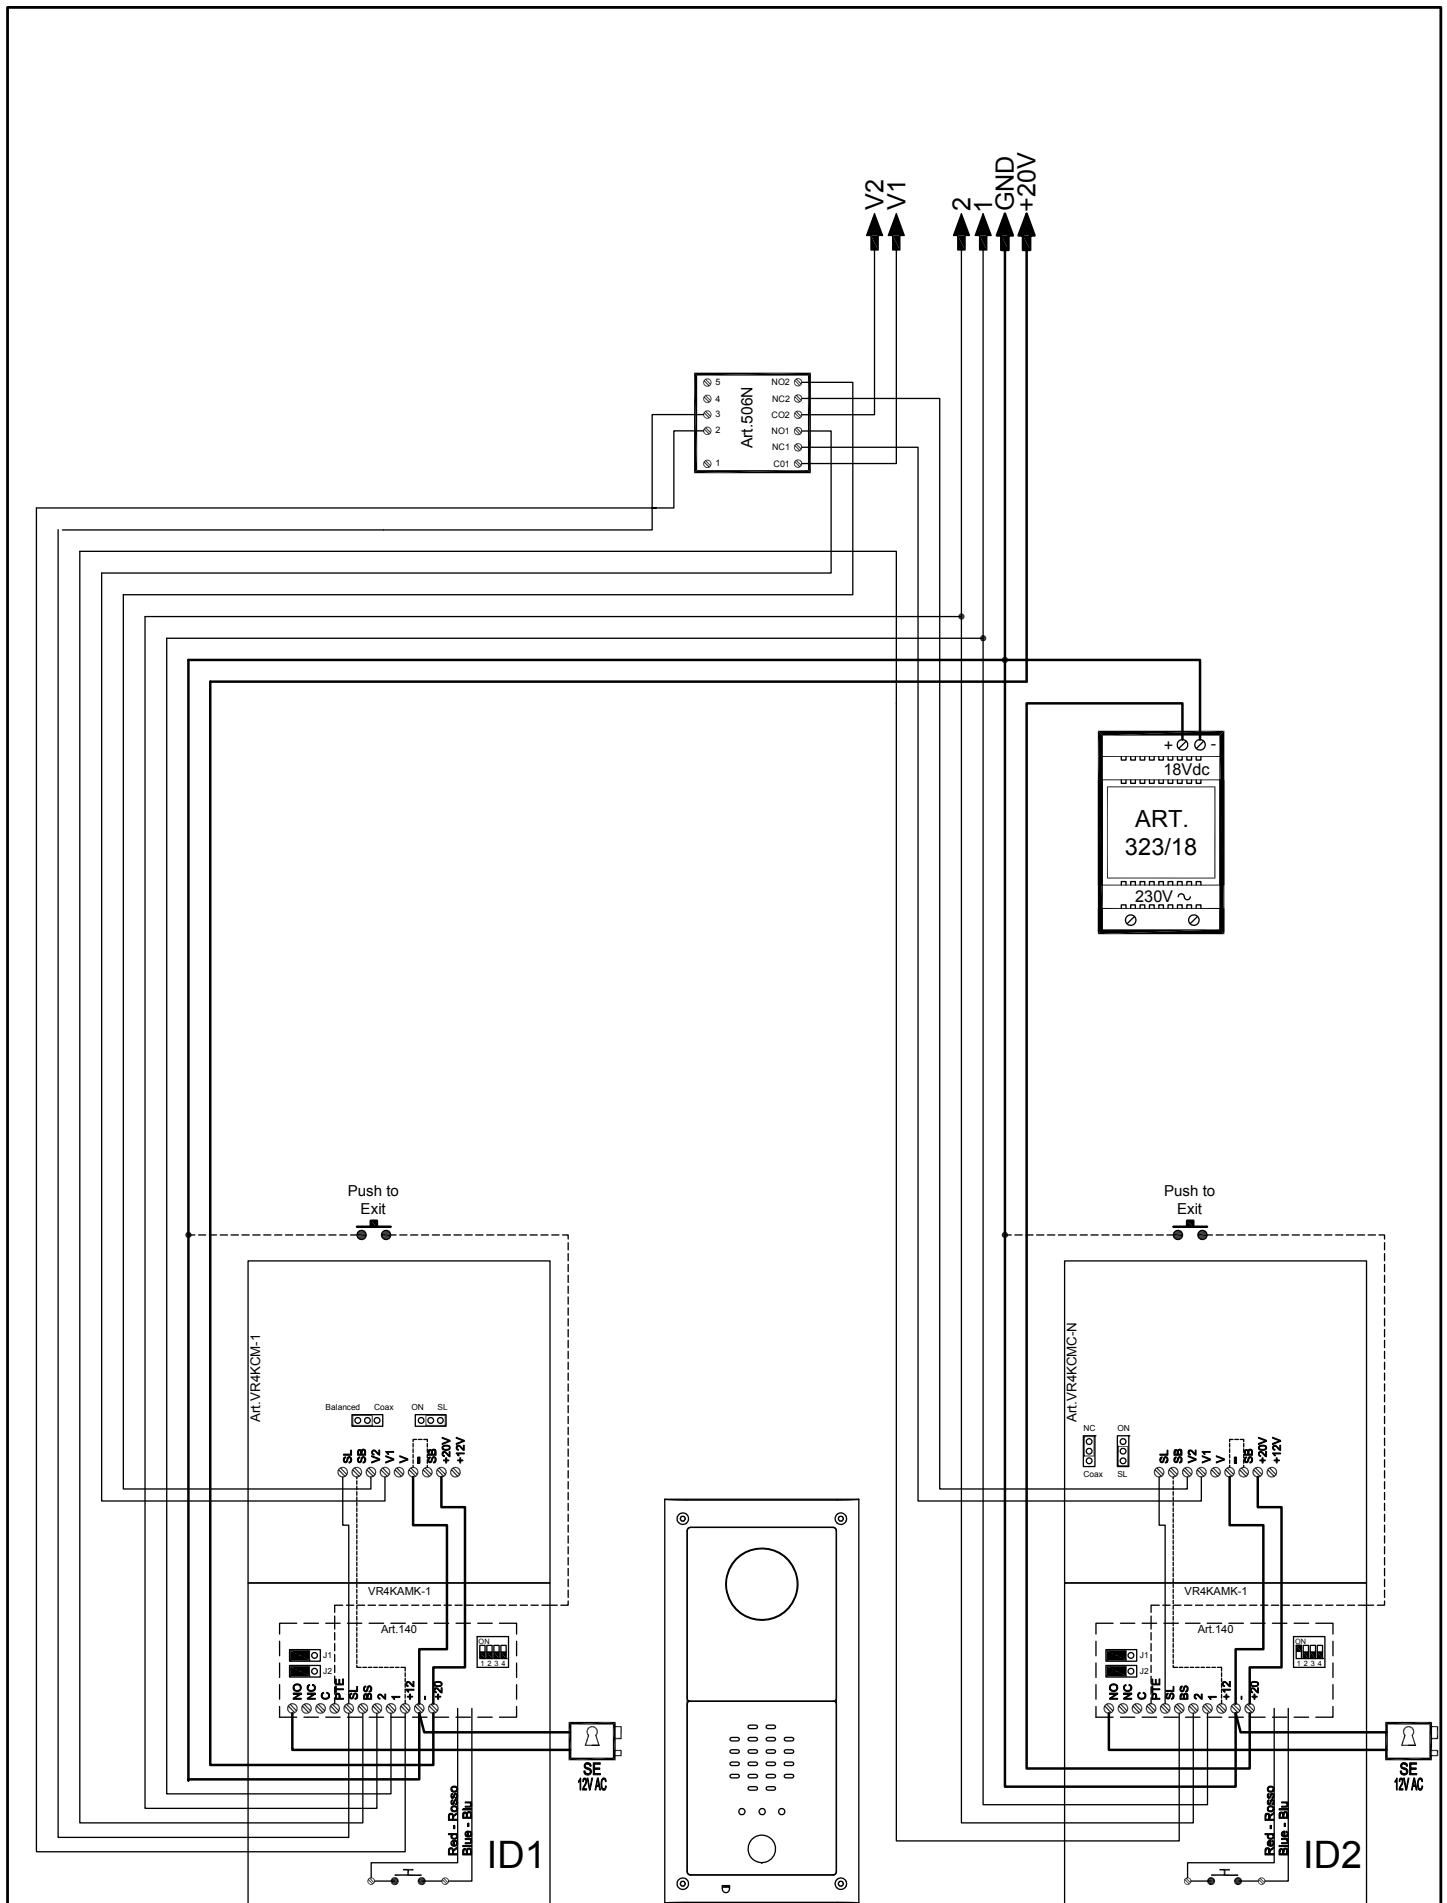

Titolo: VRVK-1/xxxxx, VRVK-1S/xxxxx with second door panel for two entrances system		Data creazione:	Foglio
Titolo: VRVK-1/xxxxx, VRVK-1S/xxxxx con secondo posto esterno per sistema a 2 ingressi		29/10/2015	1 / 1
Autore: Videx Electronics S.p.A.		Data modifica:	
Via del Lavoro 1, 63846 Monte Giberto (FM) Phone: +39 0734 631669 - Fax: +39 0734 631669 www.videx.it - info@videx.it		29/10/2015	
Note: ---		Autore:	Marco Rongoni
Note: ---		Cod. File:	vrvk-1-001-2e.d

ENG DISPOSAL

In accordance with the Legislative Decree no. 49 of 14 March 2014 "Implementation of the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE)".

The crossed-out bin symbol on the equipment or on the packaging indicates that when the product reaches the end of its lifetime, it must be collected separately from mixed municipal waste. The user must, therefore, dispose of the equipment at the end of its lifetime in the suitable waste collection centres or bring it to the retailer during the purchase of a new equipment of equivalent type at the ratio of one-to-one. Furthermore, the user is allowed to dispose of the WEEEs of very small size (domestic appliances without any external dimension exceeding 25 cm (9.84 inches) for free to the retailers, without any purchase obligation. The correct waste disposal of the WEEEs contributes to their reuse, recycling and recovery and avoids potential negative effects on the environment and human health due to the possible presence of dangerous substances within them.



ITA SMALTIMENTO

Ai sensi del Decreto Legislativo 14 marzo 2014, n° 49 "Attuazione della direttiva 2012/19/UE sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE)".

Il simbolo del cassonetto barrato riportato sull'apparecchiatura o sulla sua confezione indica che il prodotto alla fine della propria vita utile deve essere raccolto separatamente dagli altri rifiuti urbani misti. L'utente dovrà, pertanto, conferire l'apparecchiatura giunta a fine vita presso gli idonei centri di raccolta differenziata oppure riconsegnarla al rivenditore al momento dell'acquisto di una nuova apparecchiatura di tipo equivalente, in ragione di uno a uno. L'utente ha, inoltre, la possibilità di conferire gratuitamente presso i distributori, senza alcun obbligo di acquisto, per i RAEE di piccolissime dimensioni (per le apparecchiature di tipo domestico con nessuna dimensione esterna superiore a 25 cm). L'adeguata raccolta differenziata dei RAEE contribuisce al loro riutilizzo, riciclaggio e recupero ed evita potenziali effetti negativi sull'ambiente e sulla salute umana dovuti alla eventuale presenza di sostanze pericolose al loro interno.

FRA ÉLIMINATION

Conformément au décret législatif n° 49 du 14 mars 2014 relatif à l'« Application de la directive 2012/19 / UE relative aux déchets d'équipements électriques et électroniques (DEEE) ».

Le symbole de la poubelle barrée sur l'équipement ou sur son emballage indique que le produit en fin de vie utile doit être collecté séparément des autres déchets municipaux en mélange. L'utilisateur doit donc remettre l'équipement en fin de vie aux centres de collecte appropriés ou le restituer au revendeur lors de l'achat d'un nouveau type d'équipement équivalent, dans le rapport de un à un. De plus, l'utilisateur a la possibilité de conférer gratuitement aux distributeurs, sans aucune obligation d'achat, de très petits DEEE (pour les appareils ménagers sans dimensions extérieures supérieures à 25 cm). La collecte séparée adéquate des DEEE contribue à leur réutilisation, leur recyclage et leur valorisation et évite les éventuels effets négatifs sur l'environnement et la santé humaine en raison de la présence possible de substances dangereuses dans ceux-ci.

SPA ELIMINACIÓN

De conformidad con el Decreto legislativo n. 49 de 14 de marzo 2014 "Aplicación de la Directiva 2012/19/UE relativa a residuos de aparatos eléctricos y electrónicos (RAEE)".

El símbolo del contenedor tachado indicado sobre los aparatos o sobre los embalajes señala que el producto al final de su vida útil debe ser recogido separadamente de otros residuos municipales mezclados. Por tanto, el usuario deberá conferir los aparatos al final de su vida útil en los apropiados centros de recogida selectiva o devolverlos al revendedor al momento de la compra de nuevos aparatos equivalentes, en una relación de uno a uno. Además, el usuario tiene la posibilidad de entregar sin cargo a los distribuidores, sin ninguna obligación de compra, los RAEEs muy pequeños (para electrodomésticos sin dimensiones externas superiores a 25 cm).

La recogida selectiva apropiada de los RAEEs contribuye a su reutilización, reciclaje y valorización y evita potenciales impactos negativos sobre el medio ambiente y la salud humana debidos a la posible presencia de sustancias peligrosas dentro de ellos.

NLD VERWIJDERING

In overeenstemming met het Wetsbesluit nr. 49 van 14 maart 2015 "Implementatie van de Richtlijn 2012/19/EU inzake afgedankte elektrische en elektronische apparaten (AEEA)".

Het doorgekruiste vuilnisbaksymbool op het apparaat of de verpakking geeft aan dat het product aan het einde van zijn levensduur niet samen met het gewone huisvuil weggegooid mag worden. De gebruiker moet het apparaat aan het einde van zijn levensduur inleveren bij een gepast inzamelpunt of de winkel waar hij een nieuw apparaat van een gelijksoortig type zal kopen. De gebruiker kan tevens AEEA's van een zeer klein formaat (huishoudapparaten met een buitenafmeting kleiner dan 25 cm (9,84 inch)) gratis en zonder enige aankoopverplichting bij handelaars inleveren. Een juiste verwijdering van AEEA's draagt bij tot hergebruik, recycling en terugwinning, en voorkomt potentiële negatieve effecten op het milieu en de menselijke gezondheid door de mogelijke aanwezigheid van gevaarlijke stoffen.

MANUFACTURER FABBRICANTE FABRICANT FABRICANTE FABRIKANT الشركة المصنعة	VIDEX ELECTRONICS S.P.A. Via del Lavoro, 1 63846 Monte Giberto (FM) Italy Tel (+39) 0734 631669 Fax (+39) 0734 632475 www.videx.it - info@videx.it	
CUSTOMER SUPPORT SUPPORTO CLIENTI SUPPORTS CLIENTS ATENCIÓN AL CLIENTE KLANTENDIENST خدمة العملاء	VIDEX ELECTRONICS S.P.A. www.videx.it - technical@videx.it Tel: +39 0734-631669 Fax: +39 0734-632475	UK Customers only: VIDEX SECURITY LTD www.videxuk.com Tech Line: 0191 224 3174 Fax: 0191 224 1559
	<i>Main UK office:</i> VIDEX SECURITY LTD 1 Osprey Trinity Park Trinity Way LONDON E4 8TD Phone: (+44) 0370 300 1240 Fax: (+44) 020 8523 5825 www.videxuk.com marketing@videxuk.com	<i>Northern UK office:</i> VIDEX SECURITY LTD Unit 4-7 Chillingham Industrial Estate Chapman Street NEWCASTLE UPON TYNE - NE6 2XX Tech Line: (+44) 0191 224 3174 Phone: (+44) 0370 300 1240 Fax: (+44) 0191 224 1559
	<i>Greece office:</i> VIDEX HELLAS Electronics 48 Filolaou Str. 11633 ATHENS Phone: (+30) 210 7521028 (+30) 210 7521998 Fax: (+30) 210 7560712 www.videx.gr videx@videx.gr	<i>Danish office:</i> VIDEX DANMARK Hammershusgade 15 DK-2100 COPENHAGEN Phone: (+45) 39 29 80 00 Fax: (+45) 39 27 77 75 www.videx.dk videx@videx.dk
	<i>Benelux office:</i> NESTOR COMPANY NV E3 laan, 93 B-9800 Deinze Phone: (+32) 9 380 40 20 Fax: (+32) 9 380 40 25 www.videx.be info@videx.be	<i>Dutch office:</i> NESTOR COMPANY BV Business Center Twente (BCT) Grotestraat, 64 NL-7622 GM Borne www.videxintercom.nl info@videxintercom.nl



The product is CE marked demonstrating its conformity and is for distribution within all member states of the EU with no restrictions. This product follows the provisions of the European Directives 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS); CE marking 93/68/EEC.

Le produit est marqué CE à preuve de sa conformité et peut être distribué librement à l'intérieur des pays membres de l'union européenne UE.
Ce produit est conforme aux directives européennes 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS); marquage CE 93/68/EEC.

Het product heeft de CE-markering om de conformiteit ervan aan te tonen en is bestemd voor distributie binnen de lidstaten van de EU zonder beperkingen. Dit product volgt de bepalingen van de Europese Richtlijnen 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS); CE-markering 93/68/EEC.

Il prodotto è marchiato CE a dimostrazione della sua conformità e può essere distribuito liberamente all'interno dei paesi membri dell'Unione Europea UE. Questo prodotto è conforme alle direttive Europee: 2014/30/UE (EMC); 2014/35/UE (LVD); 2011/65/UE (RoHS); marcatura CE 93/68/EEC.

El producto lleva la marca CE que demuestra su conformidad y puede ser distribuido en todos los estados miembros de la unión europea UE.
Este producto cumple con las Directivas Europeas 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS); marca CE 93/68/EEC.

يحمل المنتج علامة التوافق الأوروبي CE لإظهار توافقه مع المواصفات ذات الصلة وإمكانية توزيعه في كافة دول الاتحاد الأوروبي بدون أية قيود. يلبي هذا المنتج جميع متطلبات التوجيهات الأوروبية 2014/30/UE (EMC); 2014/35/UE (LVD); 2011/65/UE (RoHS); علامة المطابقة للمواصفات الأوروبية 93/68/EEC.

